


Last Modified: 9-29-2009	5.6 A	From: 200501
Model Year: 2006	Model: Hiace	Doc ID: RM000001236000X
Title: 5L-E ENGINE MECHANICAL: ENGINE FRONT OIL SEAL: REMOVAL (2006-2010 Hiace)		

## REMOVAL

### 1. REMOVE TIMING BELT

INFO

### 2. REMOVE CRANKSHAFT TIMING PULLEY

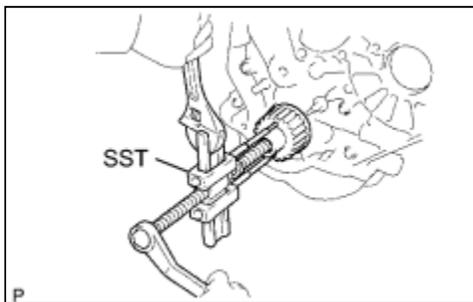

(a) Remove the crankshaft timing pulley.

If the timing pulley cannot be removed by a screwdriver, remove it with SST.

**SST: 09950-50013**

09951-05010


09952-05010

09953-05010

09953-05020

09954-05010

### 3. REMOVE TIMING GEAR CASE OR TIMING CHAIN CASE OIL SEAL

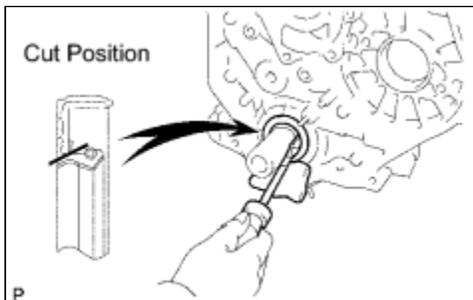

(a) Using a knife, cut off the oil seal lip.

(b) Using a screwdriver, pry out the oil seal.

#### NOTICE:

Do not damage the crankshaft. Tape the screwdriver tip.

