## **CIRCUIT OPENING RELAY**





## CIRCUIT OPENING RELAY INSPECTION

- 1. INSPECT RELAY CONTINUITY
- (a) Using an ohmmeter, check that there is continuity between terminals STA and E<sub>1</sub>.
- (b) Check that there is no continuity between terminals B and FC.
- (c) Check that there is no continuity between terminals B and FP. If continuity is not as specified, replace the relay.

## 2. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals STA and E<sub>1</sub>.
- (b) Using an ohmmeter, check that there is continuity between terminals B and FP.



Continuity



- (c) Apply battery voltage across terminals B and FC.
- (d) Check that there is continuity between terminals B and FP. If operation is not as specified, replace the relay.