

## **EGR GAS TEMPERATURE SENSOR**

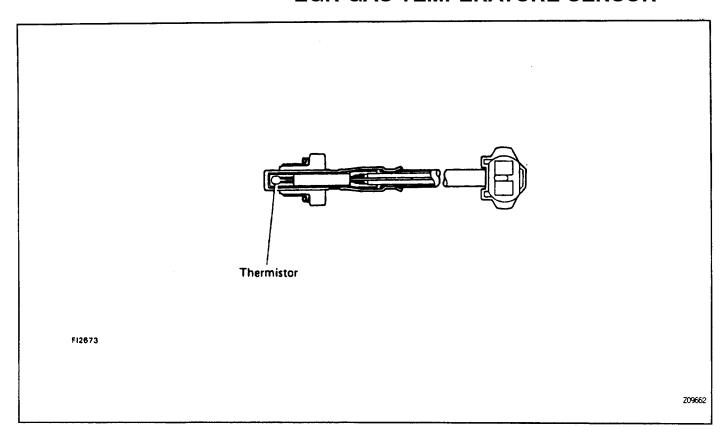

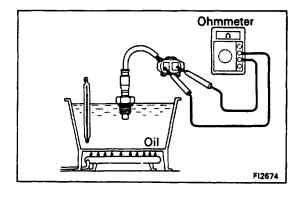

## EGR GAS TEMP. SENSOR INSPECTION

MEASURE RESISTANCE OF EGR GAS TEMP. SENSOR

Using an ohmmeter, measure the resistance between both terminals.

## Resistance:

69-89 kΩ at 50°C (122°F)

11–15 kΩ at 100°C (212°F)

2–4 k $\Omega$  at 150°C (302°F)

If the resistance is not as specified, replace the sensor.