
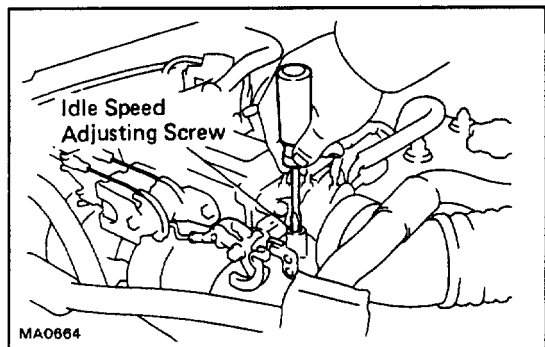


AUXILIARY AIR VALVE

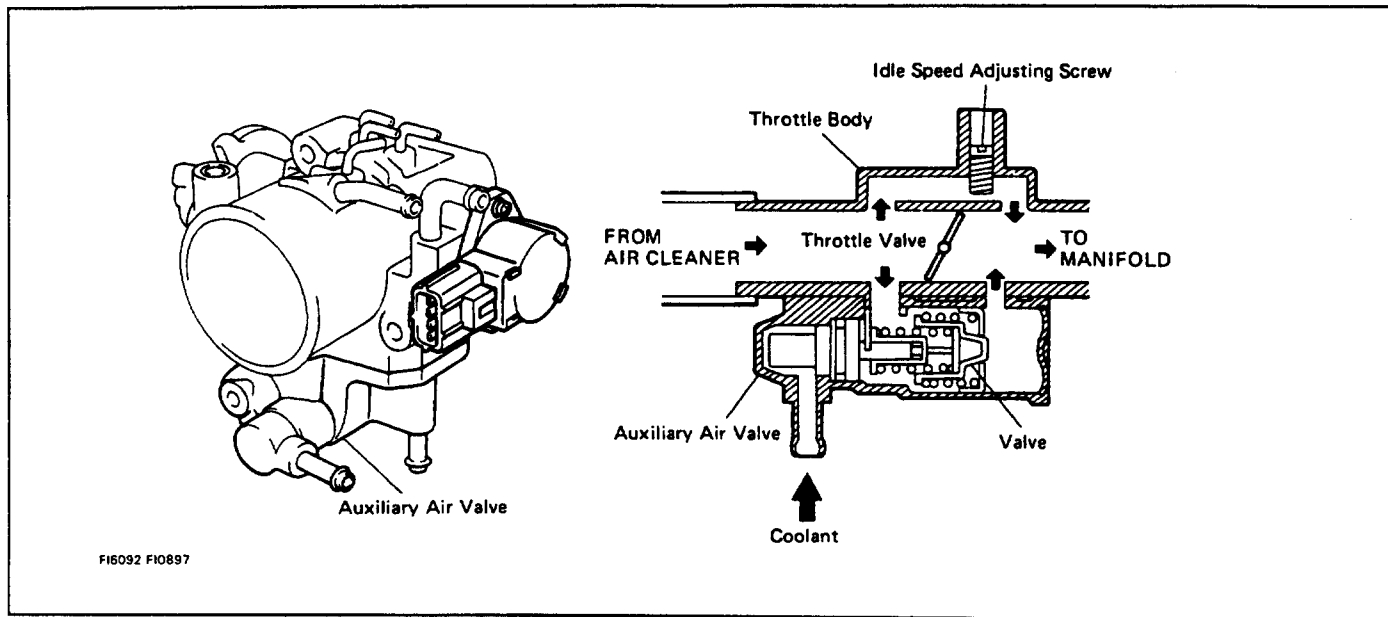

ON-VEHICLE INSPECTION

CHECK OPERATION OF AUXILIARY AIR VALVE

Check the engine rpm by fully screwing in the idle speed adjusting screw.

At low temp. (Coolant temp.: below 80°C/176°F)

- When the idle speed adjusting screw is in, the engine rpm should drop.

After warm-up

- When the idle speed adjusting screw is in, the engine rpm should drop below idle speed stop.

AUXILIARY AIR VALVE REMOVAL

1. REMOVE THROTTLE BODY
(See page [EG1-204](#))
2. REMOVE AUXILIARY AIR VALVE
(See step 2 on page [EG1-206](#))

AUXILIARY AIR VALVE INSTALLATION

1. INSTALL AUXILIARY AIR VALVE
(See step 2 on page [EG1-206](#))
2. INSTALL THROTTLE BODY
(See page [EG1-206](#))