




SPEEDOMETER DRIVEN GEAR OIL SEAL REPLACEMENT

1. REMOVE SPEEDOMETER DRIVEN GEAR OIL SEAL Using SST, remove the oil seal. SST 09921–00010

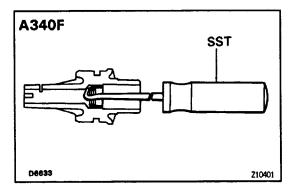

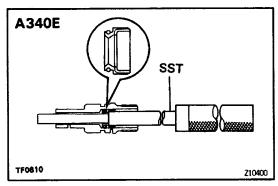

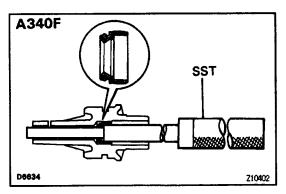

2. INSTALL SPEEDOMETER DRIVEN GEAR OIL SEAL

Using SST, install a new oil seal. SST 09201–10000 (09201 –01080)

Drive in depth: 20 mm (0.79 in.)