



PARKING LOCK PAWL

PARKING LOCK PAWL REMOVAL

1. **REMOVE TRANSFER VALVE BODY**
(See page [AT2-63](#))
2. **REMOVE PARKING LOCK PAWL BRACKET**
Remove the 2 bolts and bracket.

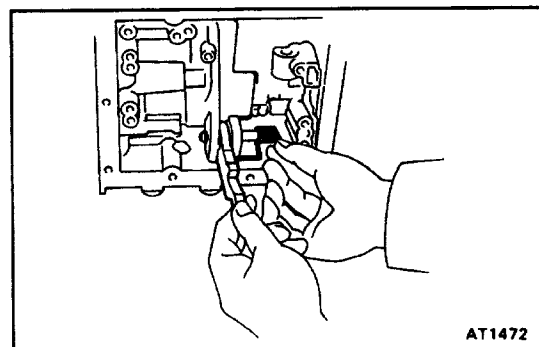


3. **REMOVE SPRING, SHAFT AND PARKING LOCK PAWL**
Remove the spring, shaft and parking lock pawl.

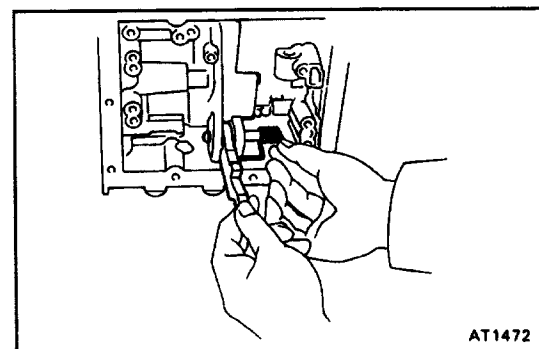

PARKING LOCK PAWL INSTALLATION

1. **INSTALL PARKING LOCK PAWL, SHAFT AND SPRING**
Install the parking lock pawl, shaft and spring.

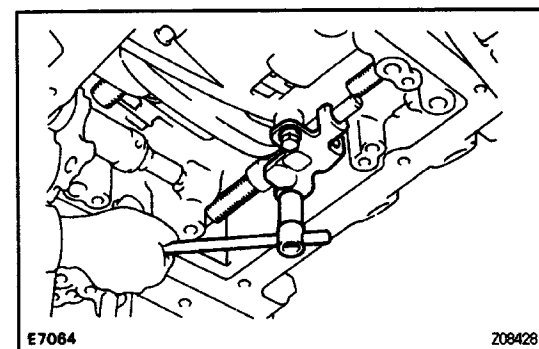

2. **INSTALL PARKING LOCK PAWL BRACKET**
 - (a) Install the 2 bolts finger tight.
 - (b) Check that the parking lock pawl operates smoothly.
 - (c) Torque the bolts.
Torque: 6.9 N-m (70 kgf-cm, 81 in.-lbf)
3. **INSTALL TRANSFER VALVE BODY**
(See page [AT2-64](#))