


## SPEEDOMETER DRIVEN GEAR OIL SEAL REPLACEMENT

### 1. REMOVE OIL SEAL

Using SST, remove the oil seal.  
SST 09921- 00010

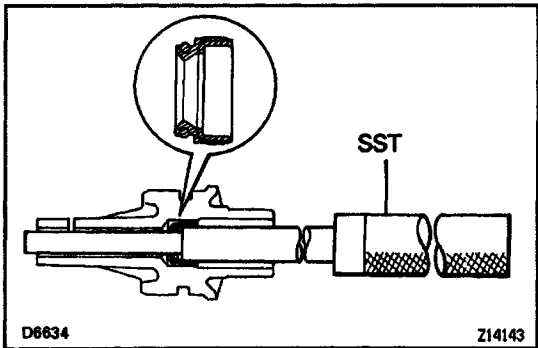

### 2. INSTALL OIL SEAL

Using SST, drive a new oil seal into the sleeve.  
SST 09201-10000 (09201 -01080)  
Oil seal depth: 25 mm (0.98 in.)