


## INTERIOR LIGHT SYSTEM PARTS LOCATION

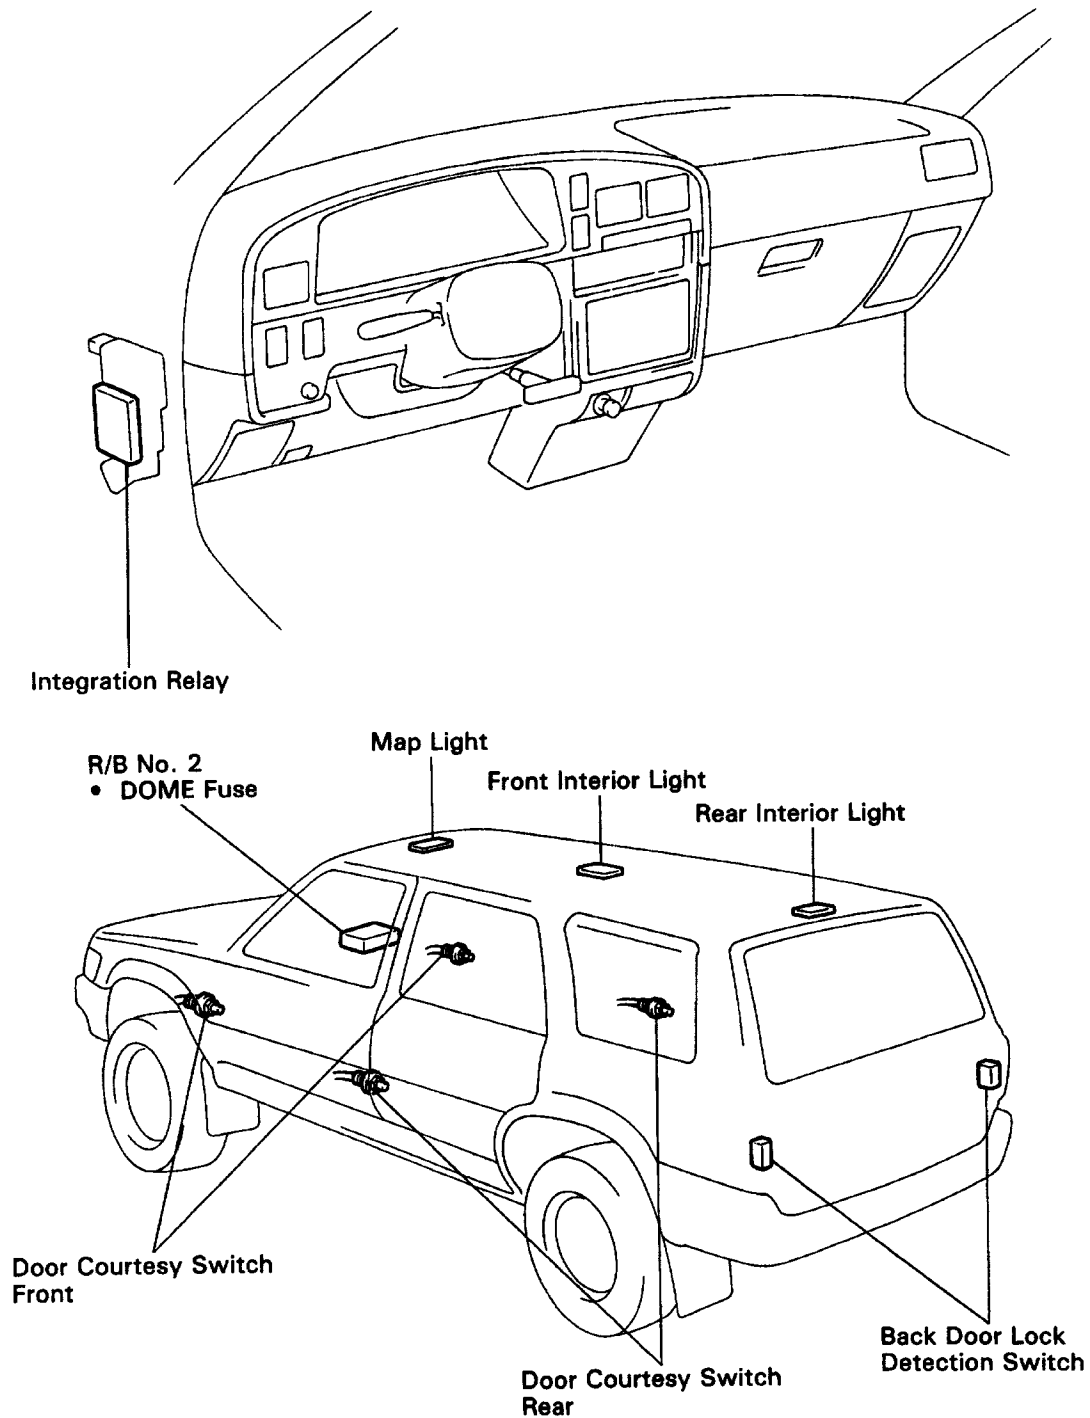


## TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name	(See page)
Interior light does not light up	1. Bulb	
	2. DOME Fuse	(BE-11)
	3. Front Interior Light Switch	(BE-32)
	4. Rear Interior Light Switch	(BE-32)
	5. Door Courtesy Switch	(BE-56)
	6. Wire Harness	
Interior light remains always on	1. Front Interior Light Switch	(BE-32)
	2. Rear Interior Light Switch	(BE-32)
	3. Door Courtesy Switch	(BE-56)
	4. Wire Harness	

## DRIVER'S DOOR COURTESY SWITCH INSPECTION


See combination meter on page [BE-66](#)

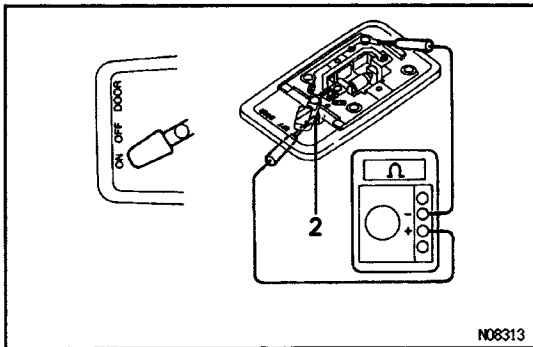


## INTERIOR LIGHT ASSEMBLY INSPECTION

### 1. INSPECT FRONT INTERIOR LIGHT ASSEMBLY

- (a) Disconnect the connector from the interior light assembly.
- (b) Turn the interior light switch ON, check that there is continuity between terminal 2 and body ground.

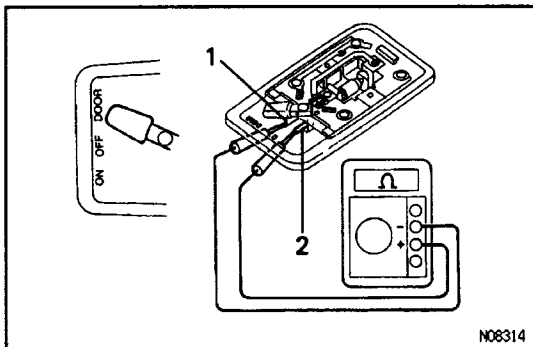


- (c) Turn the interior light switch DOOR, check that there is continuity between terminals 1 and 2.  
If operation is not as specified, replace the switch.

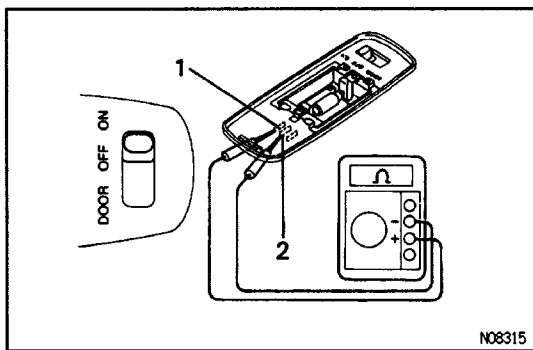


### 2. INSPECT REAR ROOM LIGHT ASSEMBLY

- (a) Disconnect the connector from the interior light assembly.
- (b) Turn the interior light switch ON, check that there is continuity between terminal 1 and 2.

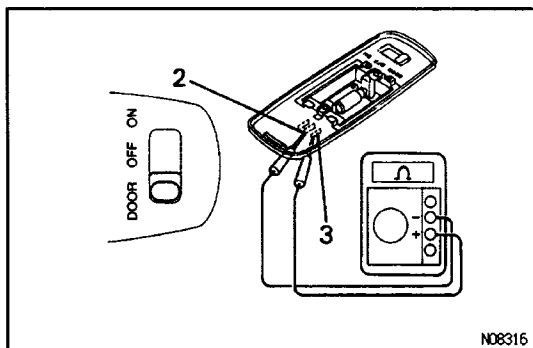

- (c) Turn the interior light switch DOOR, check that there is continuity between terminals 2 and 3.  
If operation is not as specified, replace the switch.

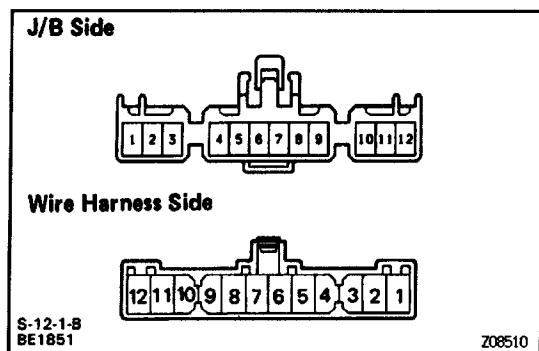

## INTEGRATION RELAY INSPECTION

### INSPECT INTEGRATION RELAY CIRCUIT

Disconnect the connector from the relay and inspect the connector on the wire harness side and J/B side as shown in the chart.

#### Wire Harness Side

Tester connection to terminal number	Condition	Specified condition
<b>4 – Ground</b>	Constant	<b>Continuity</b>
<b>7 – Ground</b>	Constant	<b>Continuity</b>
<b>10 – Ground</b>	Driver's door position Closed (Courtesy switch OFF)	<b>No continuity</b>
<b>10 – Ground</b>	Driver's door position Opened (Courtesy switch ON)	<b>Continuity</b>

#### J/B Side

Tester connection to terminal number*	Condition	Specified condition
<b>7 – Ground</b>	<b>Constant</b>	<b>Continuity</b>
<b>3 – Ground</b>	<b>Constant</b>	<b>Battery positive voltage</b>
<b>12 – Ground</b>	<b>Constant</b>	<b>Battery positive voltage</b>

If the circuit is not as specified, replace the relay.