



MOON ROOF SYSTEM PARTS LOCATION

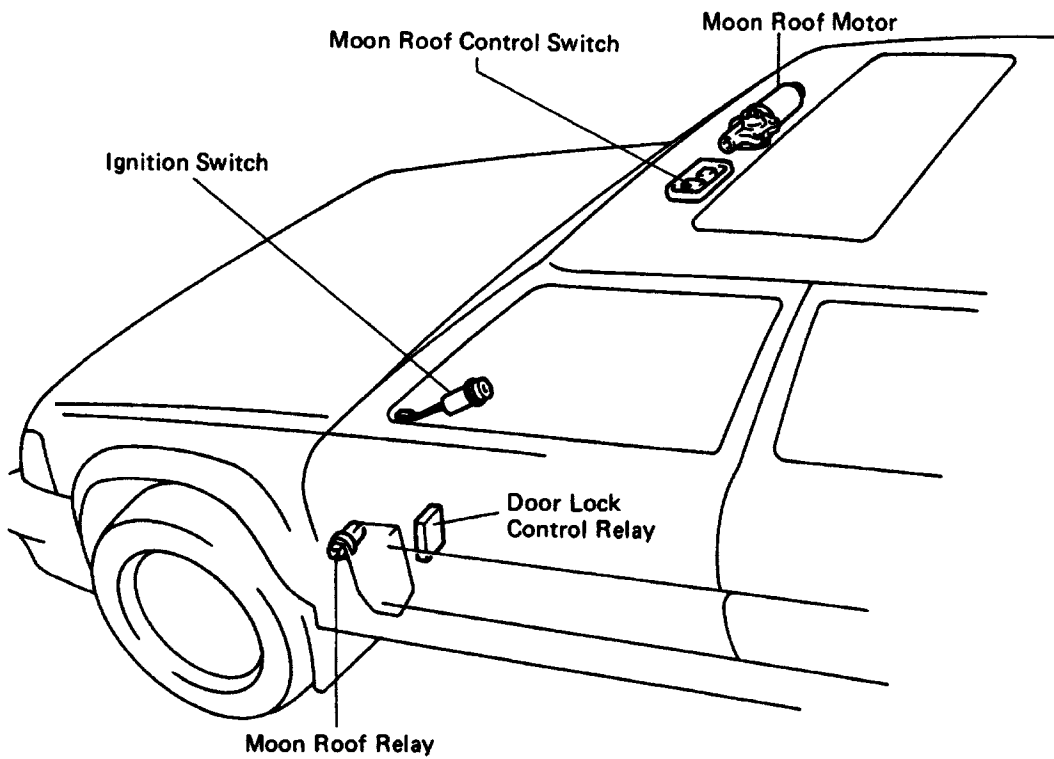

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name	(See page)
Moon Roof System does not operate	1. Circuit Breaker OFF	
	2. GAUGE Fuse (w/ Power Window)	(BE-11)
	3. Door Lock Control Relay	(BE-82)
	4. Moon Roof Relay	(BE-86)
	5. Moon Roof Control Switch	(BE-85)
	6. Moon Roof Motor	(BE-86)
	7. Wire Harness	

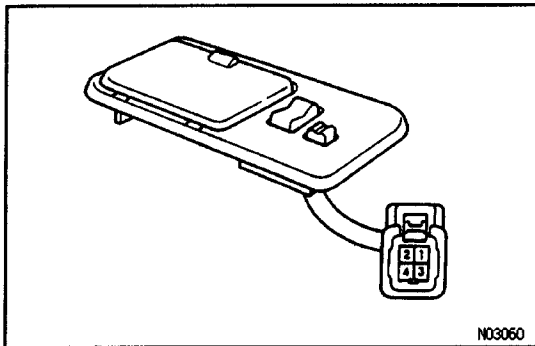


MOON ROOF CONTROL SWITCH INSPECTION

INSPECT MOON ROOF CONTROL SWITCH CONTINUITY

Switch position	Tester connection to terminal number	Specified condition
OPEN	1 – 2	Continuity
	3 – 4	
OFF	1 – 3 – 4	Continuity
CLOSE	1 – 3	Continuity
	2 – 4	


If continuity is not as specified, replace the switch.

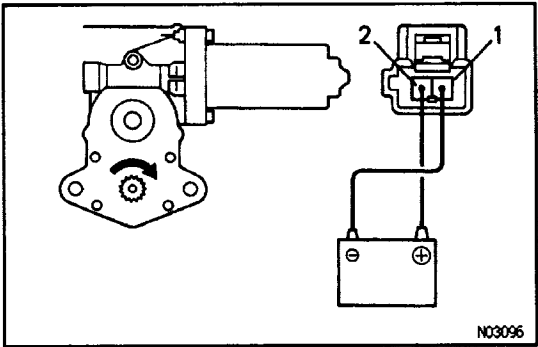


MOON ROOF MOTOR INSPECTION

INSPECT MOON ROOF MOTOR

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1 and check that the motor turns clockwise.

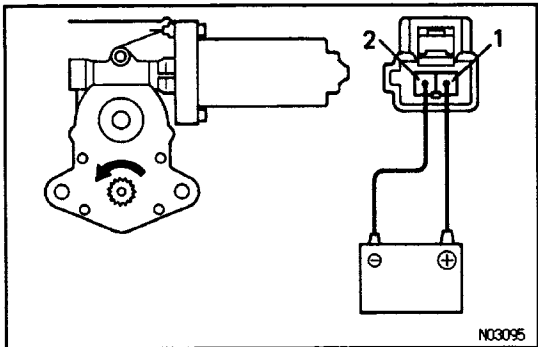

- (b) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2 and check that the motor turns counterclockwise. If operation is not as specified, replace the motor.

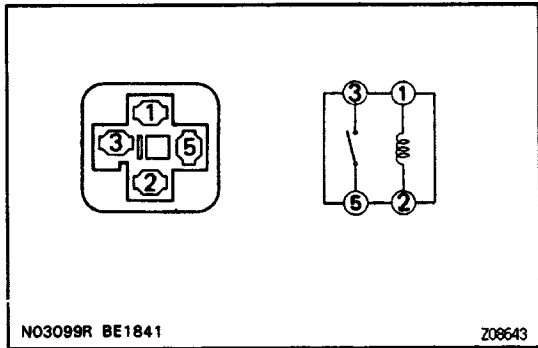

MOON ROOF CONTROL RELAY INSPECTION

INSPECT MOON ROOF CONTROL RELAY CONTINUITY

Condition	Tester connection to terminals number	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminal 1 and 2	3 – 5	Continuity

If continuity is not as specified, replace the relay.