

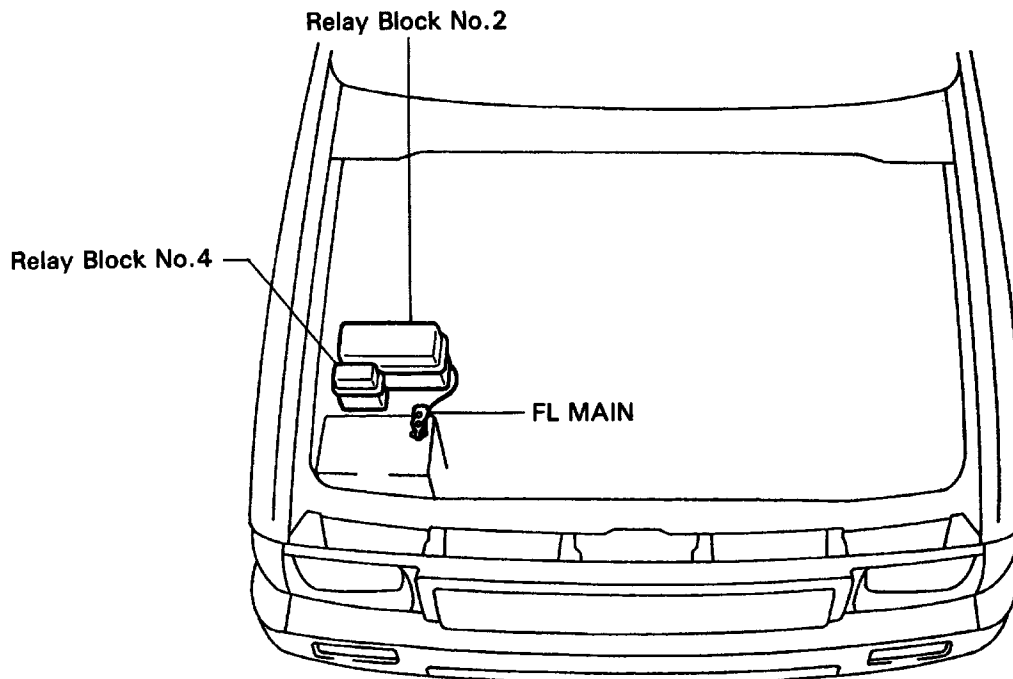


POWER SOURCE PARTS LOCATION

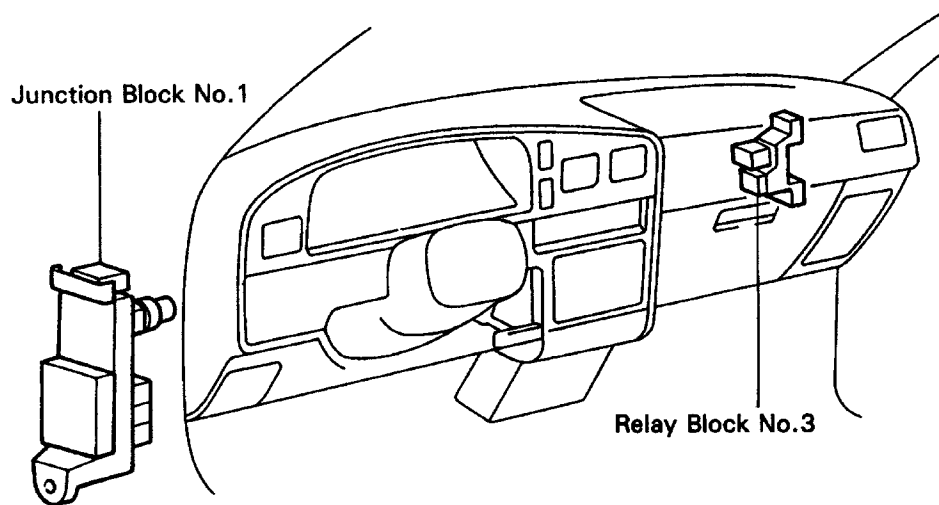

Junction Block No.1

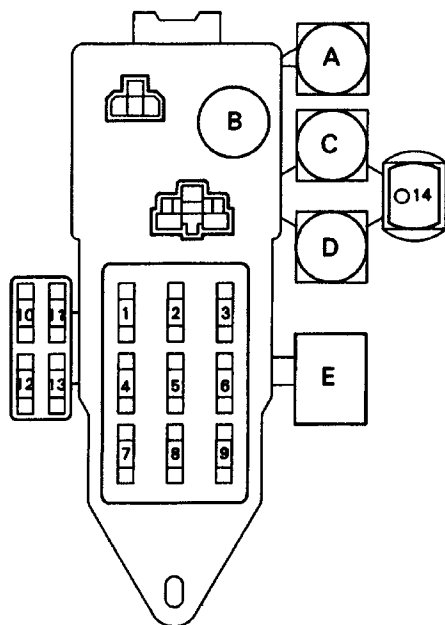


Fuses

1. ENGINE	10A
2. IGN	7.5A
3. TAIL	15A
4. WIPER	20A
5. GAUGE	10A
6. STOP	15A
7. RADIO	7.5A
8. CIG	15A
9. TURN	10A
10. RR ANTI LOCK	15A
11. -	-
12. ECU-IG	20A
13. DEFOG	20A
14. POWER	30A

Relays

- A. DRL Relay No.4 (CANADA)
 B. Taillight Control Relay
 C. Defogger Relay
 D. Moon Roof Relay
 E. Horn Relay

Relay Block No.2

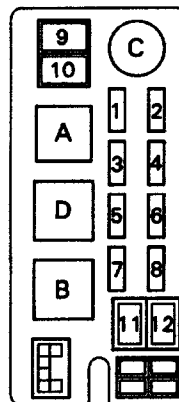

Fuses

1. -	-
2. EFI	15A
3. HAZ-HORN	15A
4. DOME	15A
5. HEAD (RH)	10A
6. HEAD (LH)	10A
7. -	-
8. -	-
9. GEN (H-Fuse) (22R-E A/T)	80A 100A
10. ABS	60 A
11. AM1 (H-Fuse)	40A
12. AM2 (H-Fuse)	30A

Relays

- B. Starter Relay
 C. EFI Relay
 D. Headlight Control Relay
 (CANADA Models)


Fuses

1. DRL	7.5A
5. HEAD (LH-LO)	10A
6. HEAD (RH-LO)	10A
7. HEAD (RH-HI)	10A
8. HEAD (LH-HI)	10A

Relays

- D. Dimmer Relay

Relay Block No.3

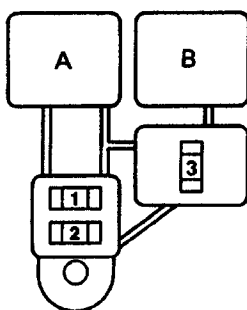


Fuse

1. A/C	10A
2. RR HEATER	20A
3. HEATER	40 A

Relays

- A. RR Heater Relay
 B. Heater Relay

Relay Block No.4

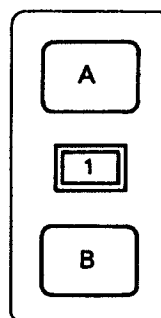

Fuse

1. CDS FAN	30A
------------	-----

Relays

- A. CDS FAN No.1 Relay
 B. CDS FAN No.2 Relay