
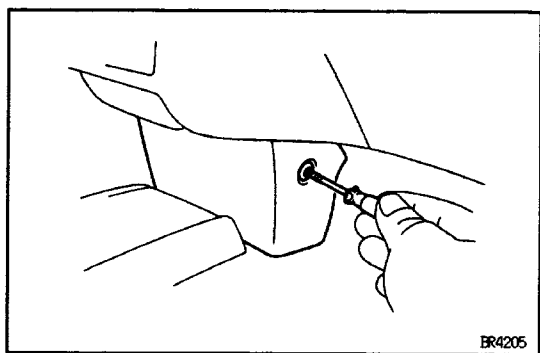



## DECELERATION SENSOR COMPONENTS

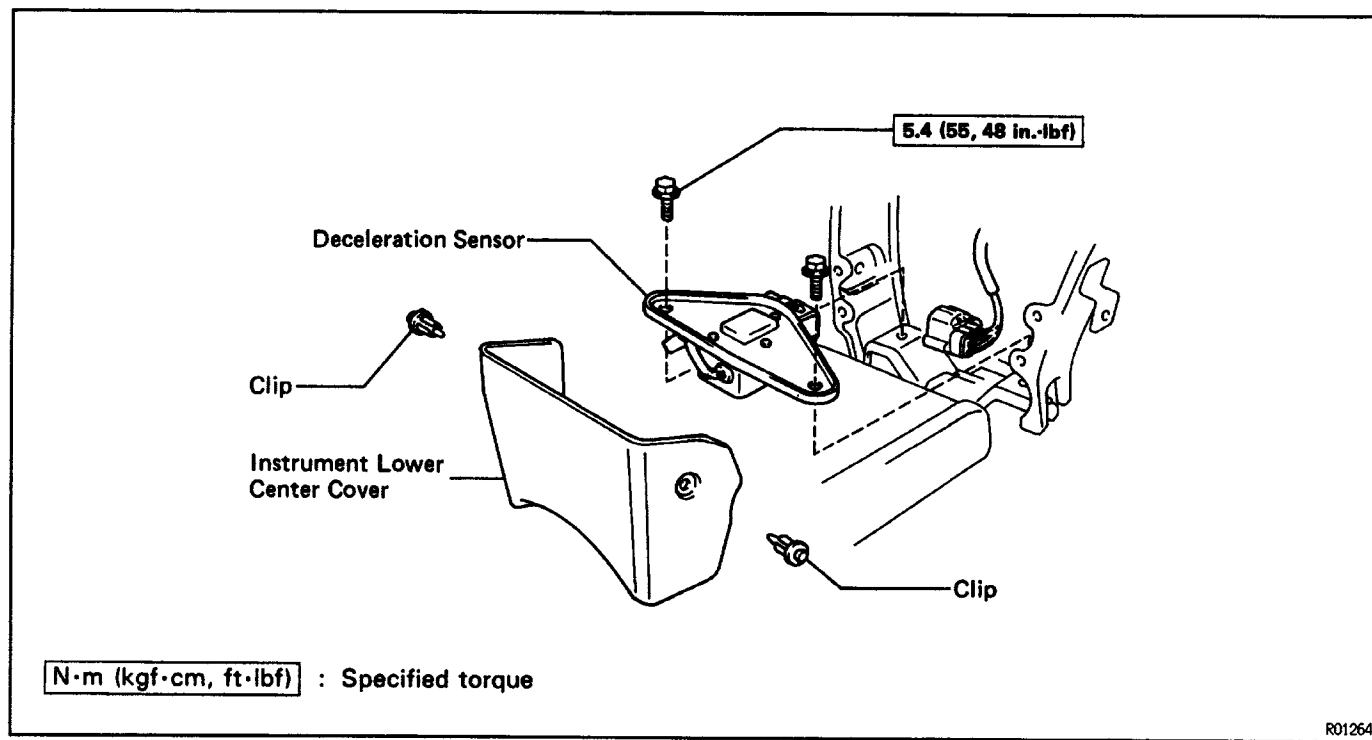

## DECELERATION SENSOR INSPECTION

### INSPECT SENSOR INSTALLATION

(a) Remove the 2 clips, then remove the instrument lower center cover.

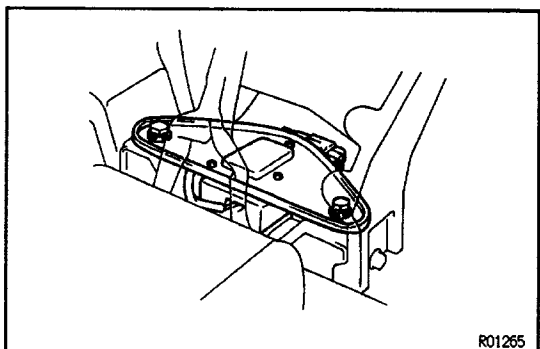


(b) Inspect that the sensor direction is correct.

(c) Check that the sensor installation bolts are tightened properly.

If not, tighten the bolts.

**Torque: 5.4 N-m (55 kgf-cm, 48 in.-lbf)**

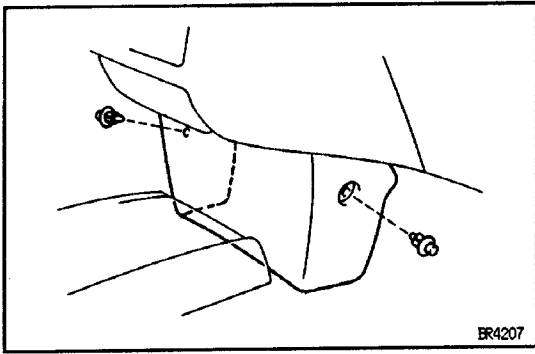

(d) Install the instrument lower center cover and 2 clips.