



CONTROL RELAY

SOLENOID RELAY INSPECTION

INSPECT SOLENOID RELAY OPERATION

Inspect the relay continuity between terminals.

Terminal Condition	6	1	2	3	5	4
Constant	○	○		○	○	○
Apply battery positive voltage between terminals 1 and 6			○		○	○

If relay operation is not as specified, replace the solenoid relay.