
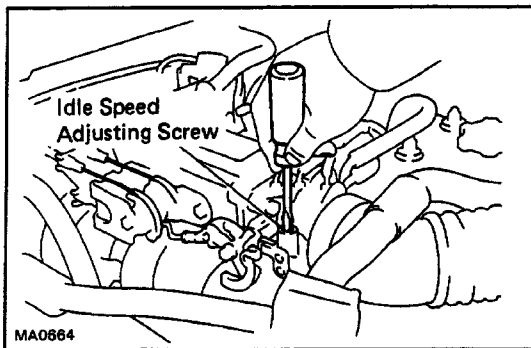


AUXILIARY AIR VALVE

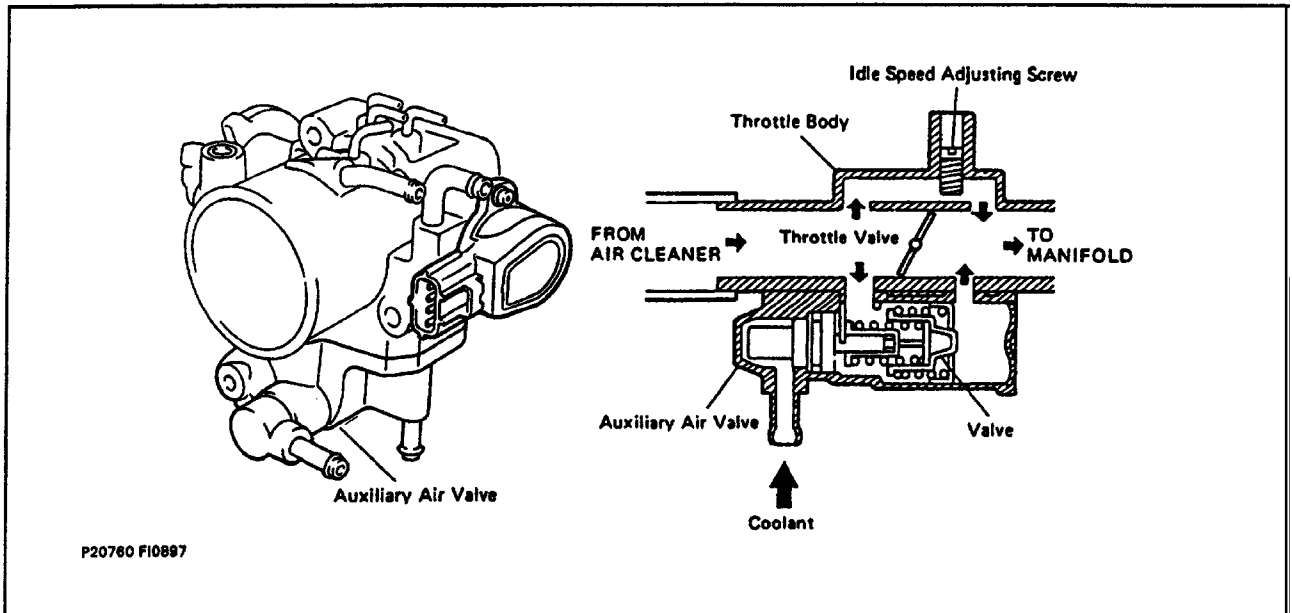

ON-VEHICLE INSPECTION

CHECK OPERATION OF AUXILIARY AIR VALVE

Check the engine rpm by fully screwing in the idle speed adjusting screw.

At low temp. (Coolant temp.: below 80°C/176°F)

- When the idle speed adjusting screw is in, the engine rpm should drop.

After warm-up

- When the idle speed adjusting screw is in, the engine rpm should drop below idle speed stop.

AUXILIARY AIR VALVE REMOVAL

1. REMOVE THROTTLE BODY

(See throttle body removal)

2. REMOVE AUXILIARY AIR VALVE

(See step 2 in throttle body disassembly)

AUXILIARY AIR VALVE INSTALLATION

1. INSTALL AUXILIARY AIR VALVE

(See step 2 in throttle body assembly)

2. INSTALL THROTTLE BODY

(See throttle body installation)