
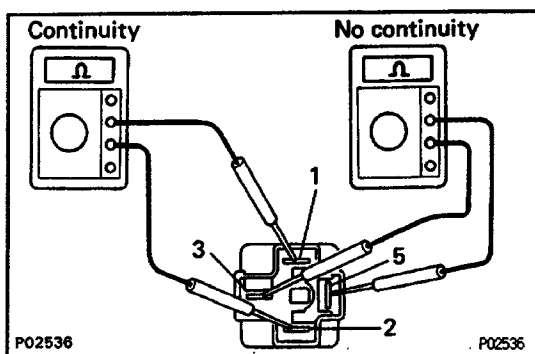


EFI MAIN RELAY

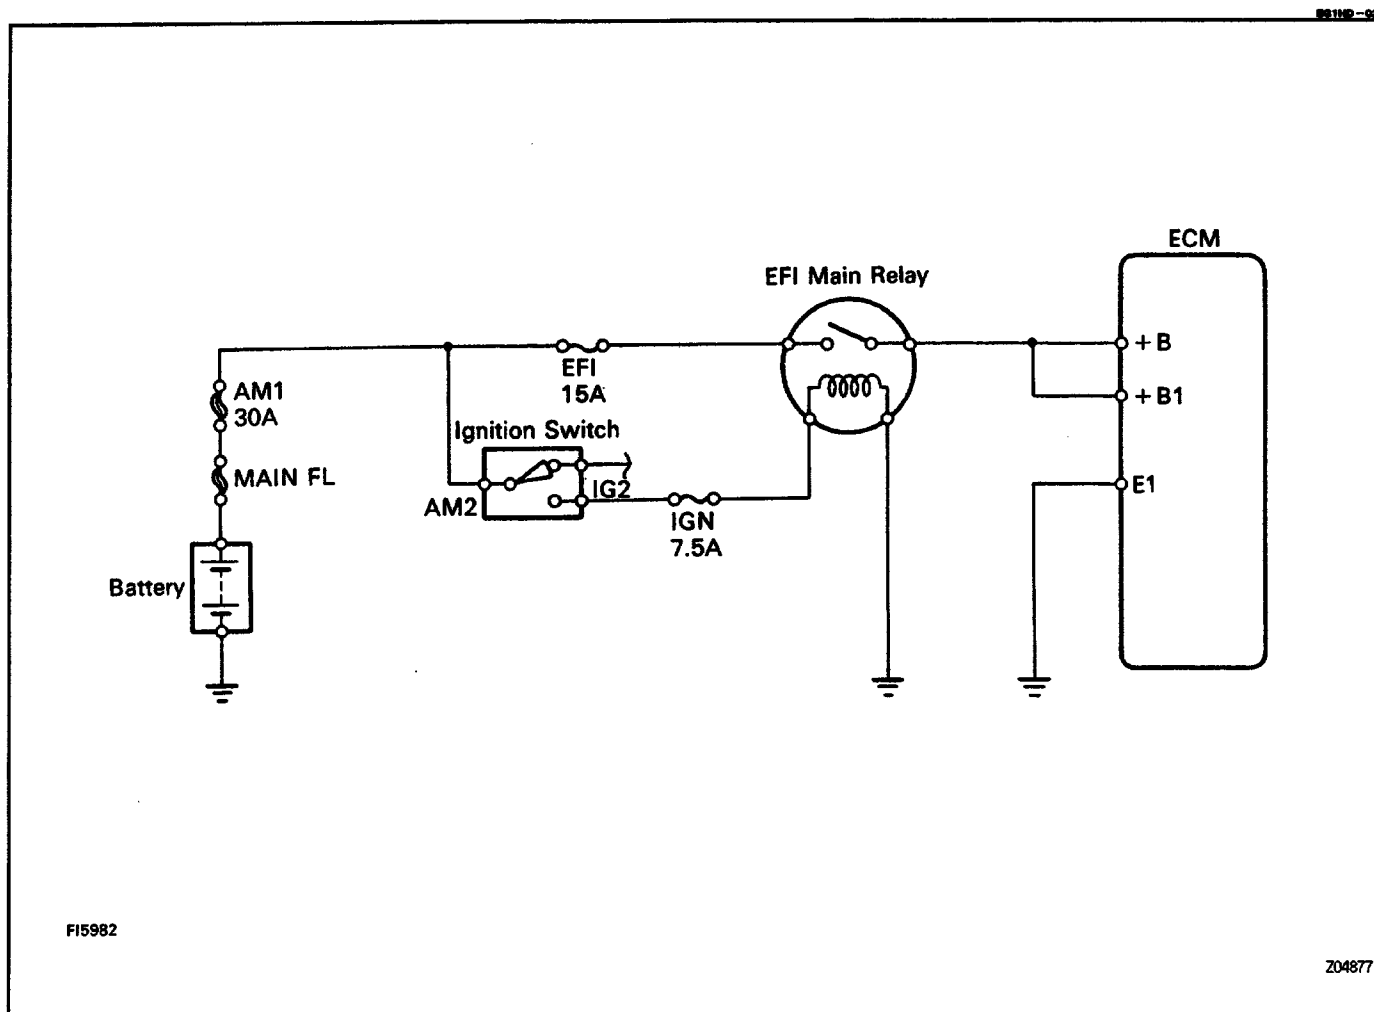

EFI MAIN RELAY INSPECTION

1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- Check that there is no continuity between terminals 3 and 5.
- Check that there is no continuity between terminals 2 and 5.

If continuity is not as specified, replace the relay.

2. INSPECT RELAY OPERATION

- Apply battery voltage across terminals 1 and 2.
- Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If operation is not as specified, replace the relay.

