

ABBREVIATIONS USED IN THIS MANUAL

ADD	Automatic Disconnecting Differential
A/T	Automatic Transmission
ATF	Automatic Transmission Fluid
BTDC	Before Top Dead Center
Calif.	California
CB	Circuit Breaker
DP	Dash Pot
ECU	Electronic Control Unit
E/G	Engine
ELR	Emergency Locking Retractor
ESA	Electronic Spark Advance
EX	Exhaust (Manifold, Valve)
FIPG	Formed in Place Gasket
FL	Fusible Link
FPU	Fuel Pressure Up
Fr	Front
IG	Ignition
IN	Intake (Manifold, Valve)
J/6	Junction Block
LH	Left – Hand
LSP & BV	Load Sensing Proportioning and By-Pass Valve
Max.	Maximum
Min.	Minimum
MP	Multipurpose
M/T	Manual Transmission
O/D, o o	Overdrive
OHC	Over Head Camshaft
o/s	Oversize
PCV	Positive Crankcase Ventilation
PS	Power Steering
RH	Right-Hand
Rr	Rear
SSM	Special Service Materials
SST	Special Service Tools
STD	Standard
SW	Switch

TDC	Top Dead Center
TEMP.	Temperature
T/M	Transmission
u/s	Undersize
VCV	Vacuum Control Valve
VSV	Vacuum Switching Valve
VTV	Vacuum Transmitting Valve
w/	With
w/o	Without
2WD	Two Wheel Drive Vehicles (4 x 2)
4WD	Four Wheel Drive Vehicles (4 x 4)