

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

PRECAUTION

- Using a razor blade and gasket scraper, remove all the old FIPG material from the gasket surfaces.
- Thoroughly clean all components to remove all the loose material.
- Clean both sealing surfaces with a non-residue solvent.
- Apply the seal packing in an approx. 1 mm (0.04 in.) wide bead along the sealing surface.
- Part must be assembled within 10 minutes of application. Otherwise, the FIPG material must be removed and reapplied.