
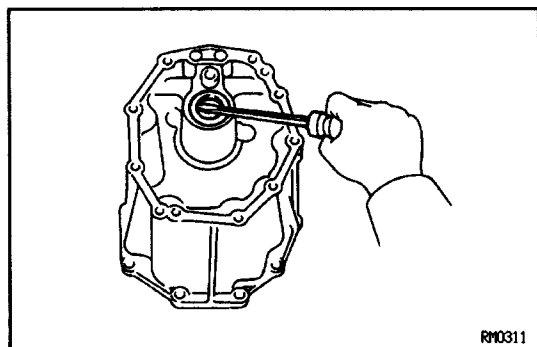



TRANSFER ADAPTOR COMPONENTS

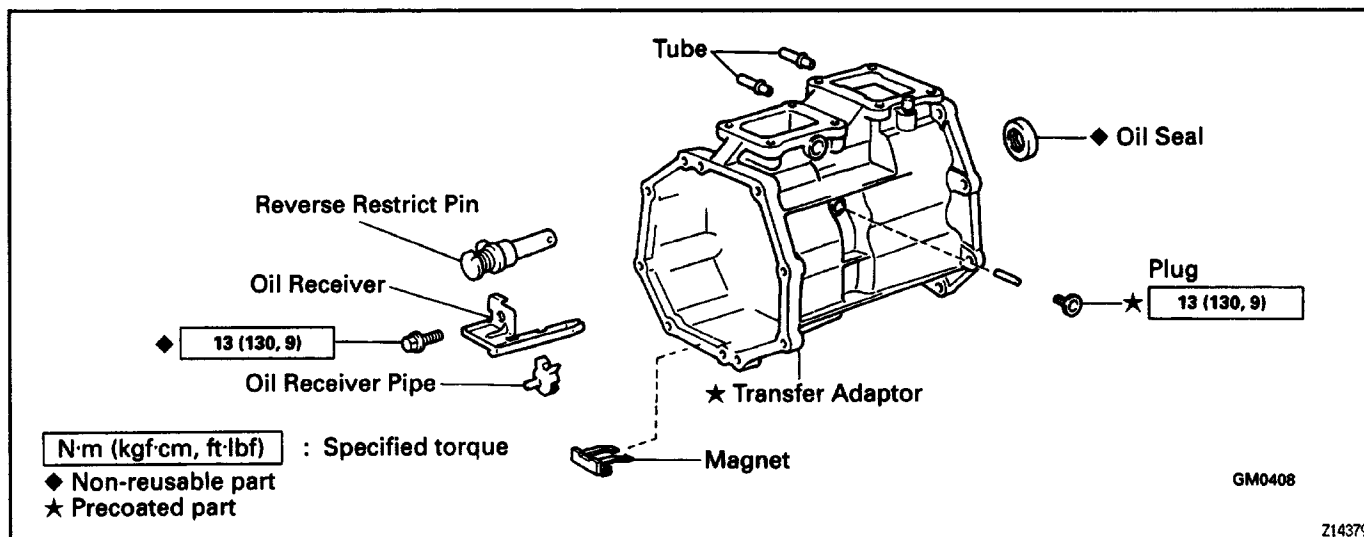


OIL SEAL REPLACEMENT

IF NECESSARY, REPLACE TRANSFER ADAPTOR OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

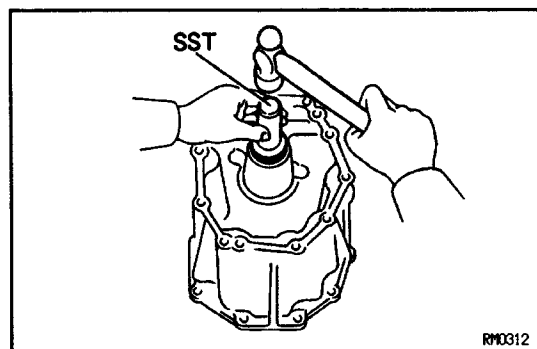


(b) Using SST and a hammer, drive in a new oil seal.
SST 09325-12010

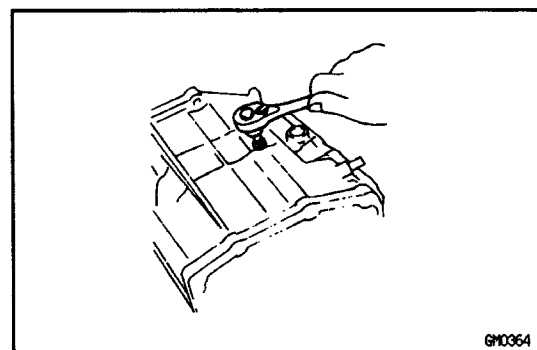


REVERSE RESTRICT PIN INSPECTION AND REPLACEMENT

1. REMOVE REVERSE RESTRICT PIN


(a) Using a torx socket wrench, remove the screw plug.
(Torx socket wrench T40 09042-00020)

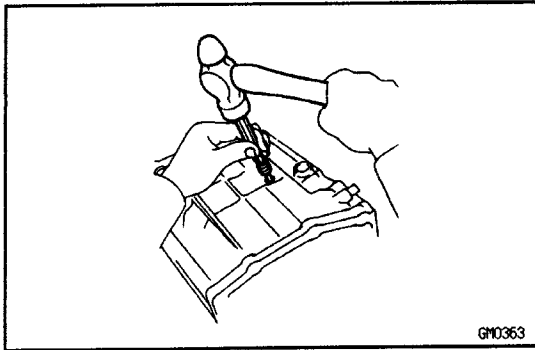

- (b) Using a pin punch and hammer, drive out the slotted spring pin.

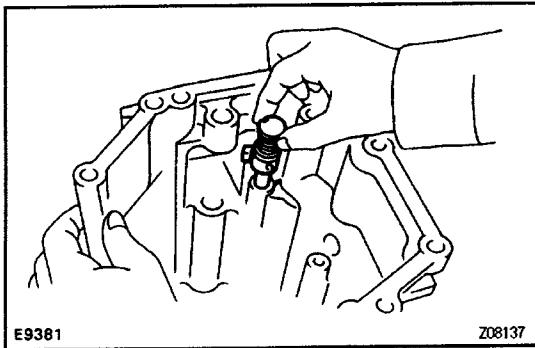


- (c) Remove the reverse restrict pin.

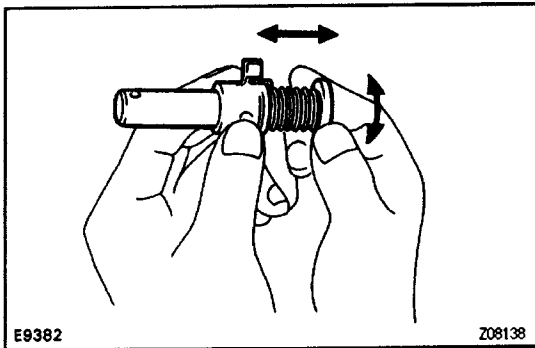


2. INSPECT REVERSE RESTRICT PIN

- Turn and push the reverse restrict pin by hand.
Check for smooth operation.

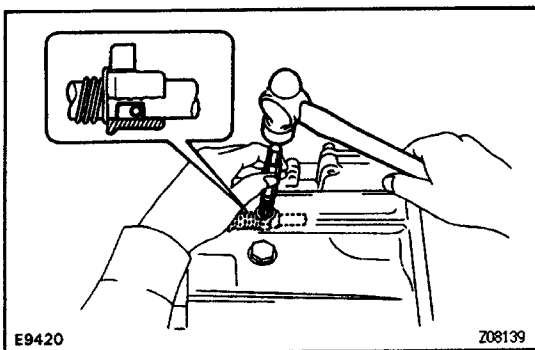

3. INSTALL REVERSE RESTRICT PIN

- (a) Install the reverse restrict pin to the transfer adaptor.
(b) Using a pin punch and hammer, drive in the slotted spring pin, as shown.

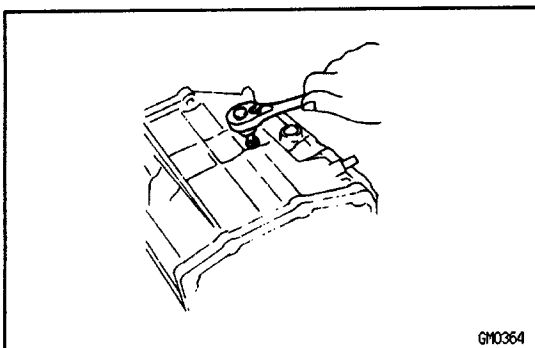

- (c) Apply sealant to the plug threads.
Sealant: Part No.08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent
(d) Using a torx socket wrench, install and torque the screw plug.
(Torx socket wrench T40 09042-00020)
Torque: 19 N-m (190 kgf-cm, 14 ft-lbf)