
 




 





 




PREPARATION

SST (SPECIAL SERVICE TOOLS)

	09308-00010 Oil Seal Puller	Steering knuckle outside bushing removal
	09550-10012 Replacer Set 'B'	
	(09252-10010) No. 1 Replacer Handle	
	(09555-10010) Differential Drive Pinion Rear Bearing Replacer	Steering knuckle outside bushing installation
	09607-60020 Front Wheel Adjusting Nut Wrench	Front axle hub bearing adjusting nut and lock nut
	09608-35014 Axle Hub & Drive Pinion Bearing Tool Set	
	(09608-06020) Handle	
	(09608-06150) Rear Hub Outer Bearing Cup Replacer	Oil seal
	(09608-06180) Drive Pinion Rear Bearing Cup Replacer	Dust deflector installation
	(09608-06200) Rear Axle Bearing Replacer	Front axle hub bearing outside race
	(09608-06210) Rear Axle Bearing Replacer	Front axle hub bearing inside race
	09628-62011 Ball Joint Puller	Lower ball joint
	09751-36011 Brake Line Union Nut 10 x 12 mm Wrench	Front brake tube

RECOMMENDED TOOLS

	09905-00012 Snap Ring No.1 Expander.	
	09905-00013 Snap Ring Pliers.	

EQUIPMENT

Dial indicator	
Torque wrench	
Spring tension gauge	

SSM (SPECIAL SERVICE MATERIALS)

08833-00070 Adhesive 1324, THREE BOND 1324 or equivalent	Steering knuckle arm set bolt
--	-------------------------------