

# GENERAL INSPECTION

## 1. INSPECT TIRE

(a) Check the tires for wear and for the proper inflation.



Cold tire inflation pressure

Tire size	Front	Rear
<b>P225/75R15</b>	<b>180 kPa</b>	<b>200 kPa</b>
<b>31X10.5R 15LT</b>	<b>(1.8 kgf/cm<sup>2</sup>, 26 psi)</b>	<b>(2.0 kgf/cm<sup>2</sup>, 29 psi)</b>

(b) Check the tire runout.

**Tire runout:**

**Less than 3.0 mm (0.118 in.)**

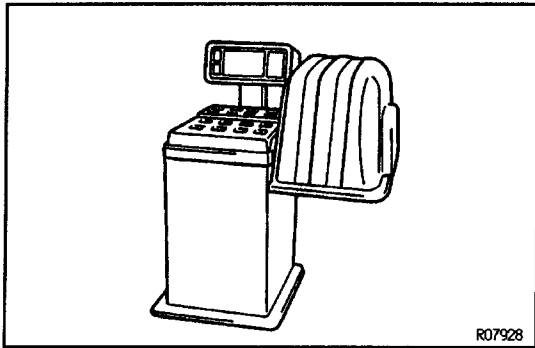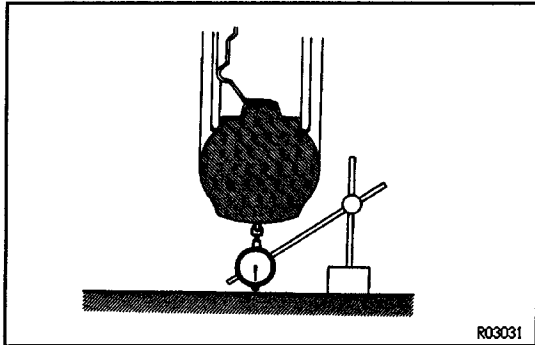

## 2. INSPECT WHEEL BALANCE

(a) Check and adjust the Off-the-car balance.

(b) If necessary, check and adjust the On-the-car balance.

**Unbalance after adjustment:**

**15.0 g (0.033 lb) or less**

## 3. CHECK WHEEL BEARING LOOSENESS

## 4. CHECK FRONT SUSPENSION FOR LOOSENESS

## 5. CHECK STEERING LINKAGE FOR LOOSENESS

## 8. CHECK BALL JOINT FOR LOOSENESS

## 7. CHECK SHOCK ABSORBER WORKS PROPERLY

Check for oil leak

Check mounting bushings for wear

Bounce front and rear of the vehicle