
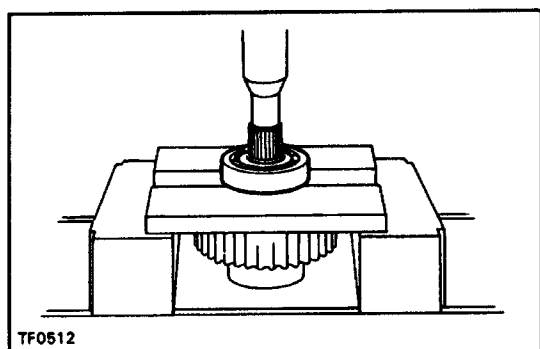



## DRIVEN SPROCKET COMPONENTS

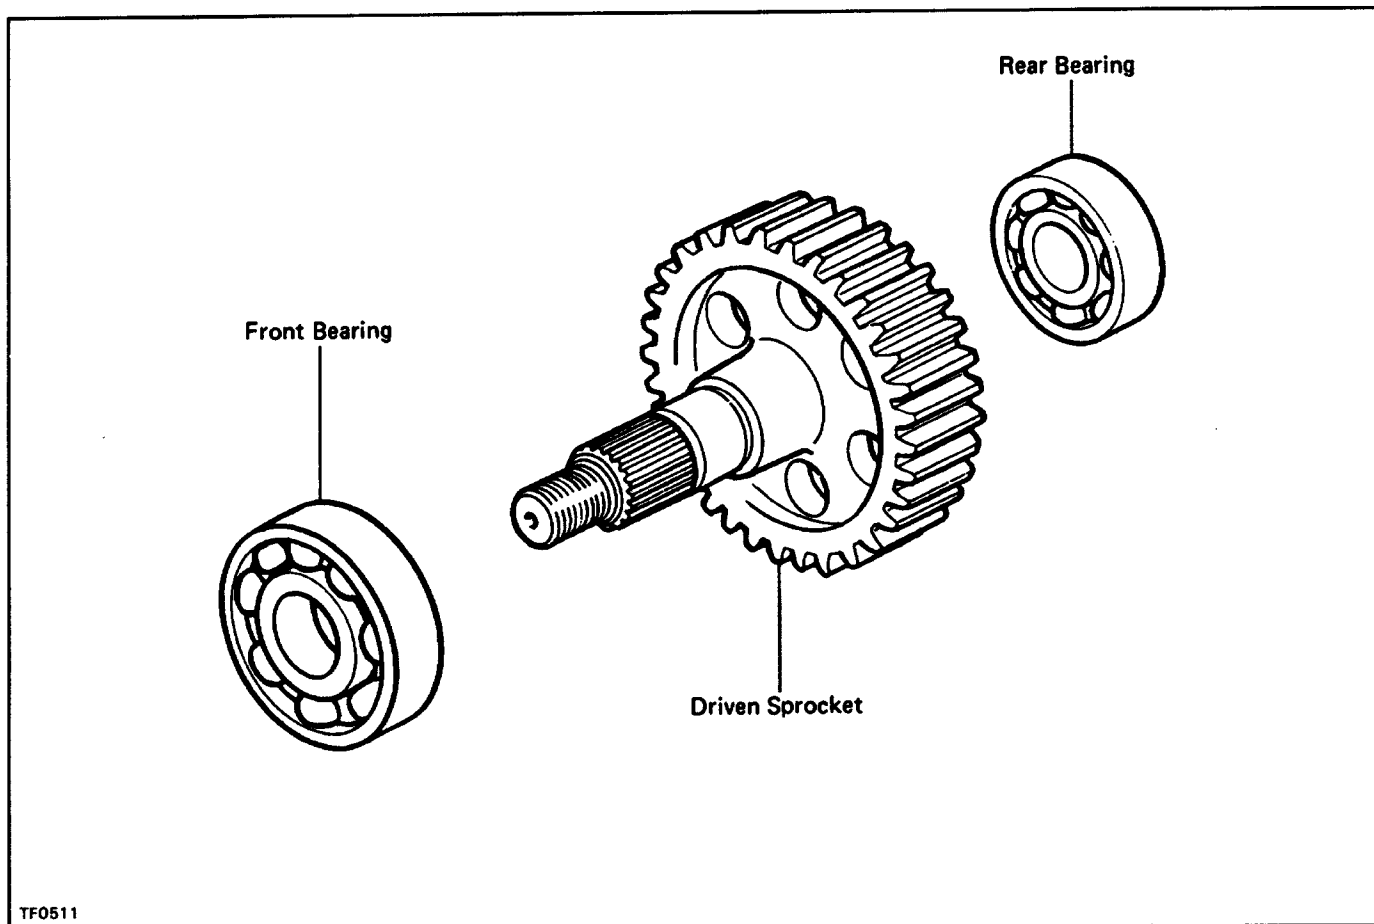

### DRIVEN SPROCKET DISASSEMBLY


#### 1. REMOVE FRONT BEARING

Using a press, remove the front bearing.

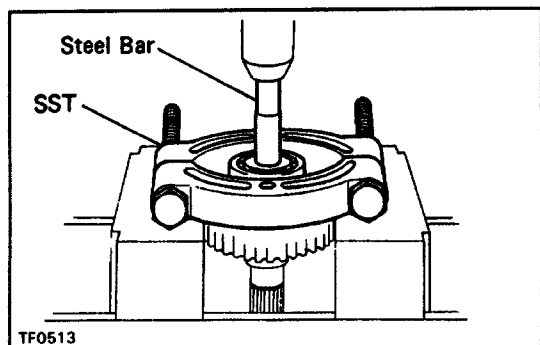

#### 2. REMOVE REAR BEARING


Using SST and a press, remove the rear bearing.  
SST 09950-00020

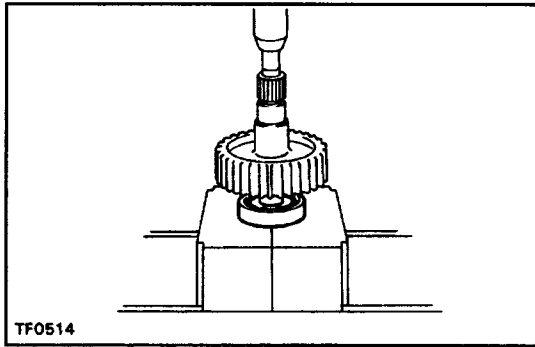

## DRIVEN SPROCKET ASSEMBLY

### 1. INSTALL REAR BEARING

Using a press, install the rear bearing.

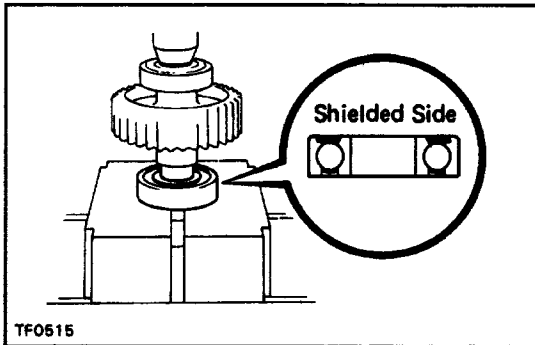

### 2. INSTALL FRONT BEARING

Using a press, install the front bearing.

HINT: Make sure to install the bearing in the correct direction.