


# OVERALL ELECTRICAL WIRING DIAGRAM

## HOW TO USE THIS SECTION

\* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

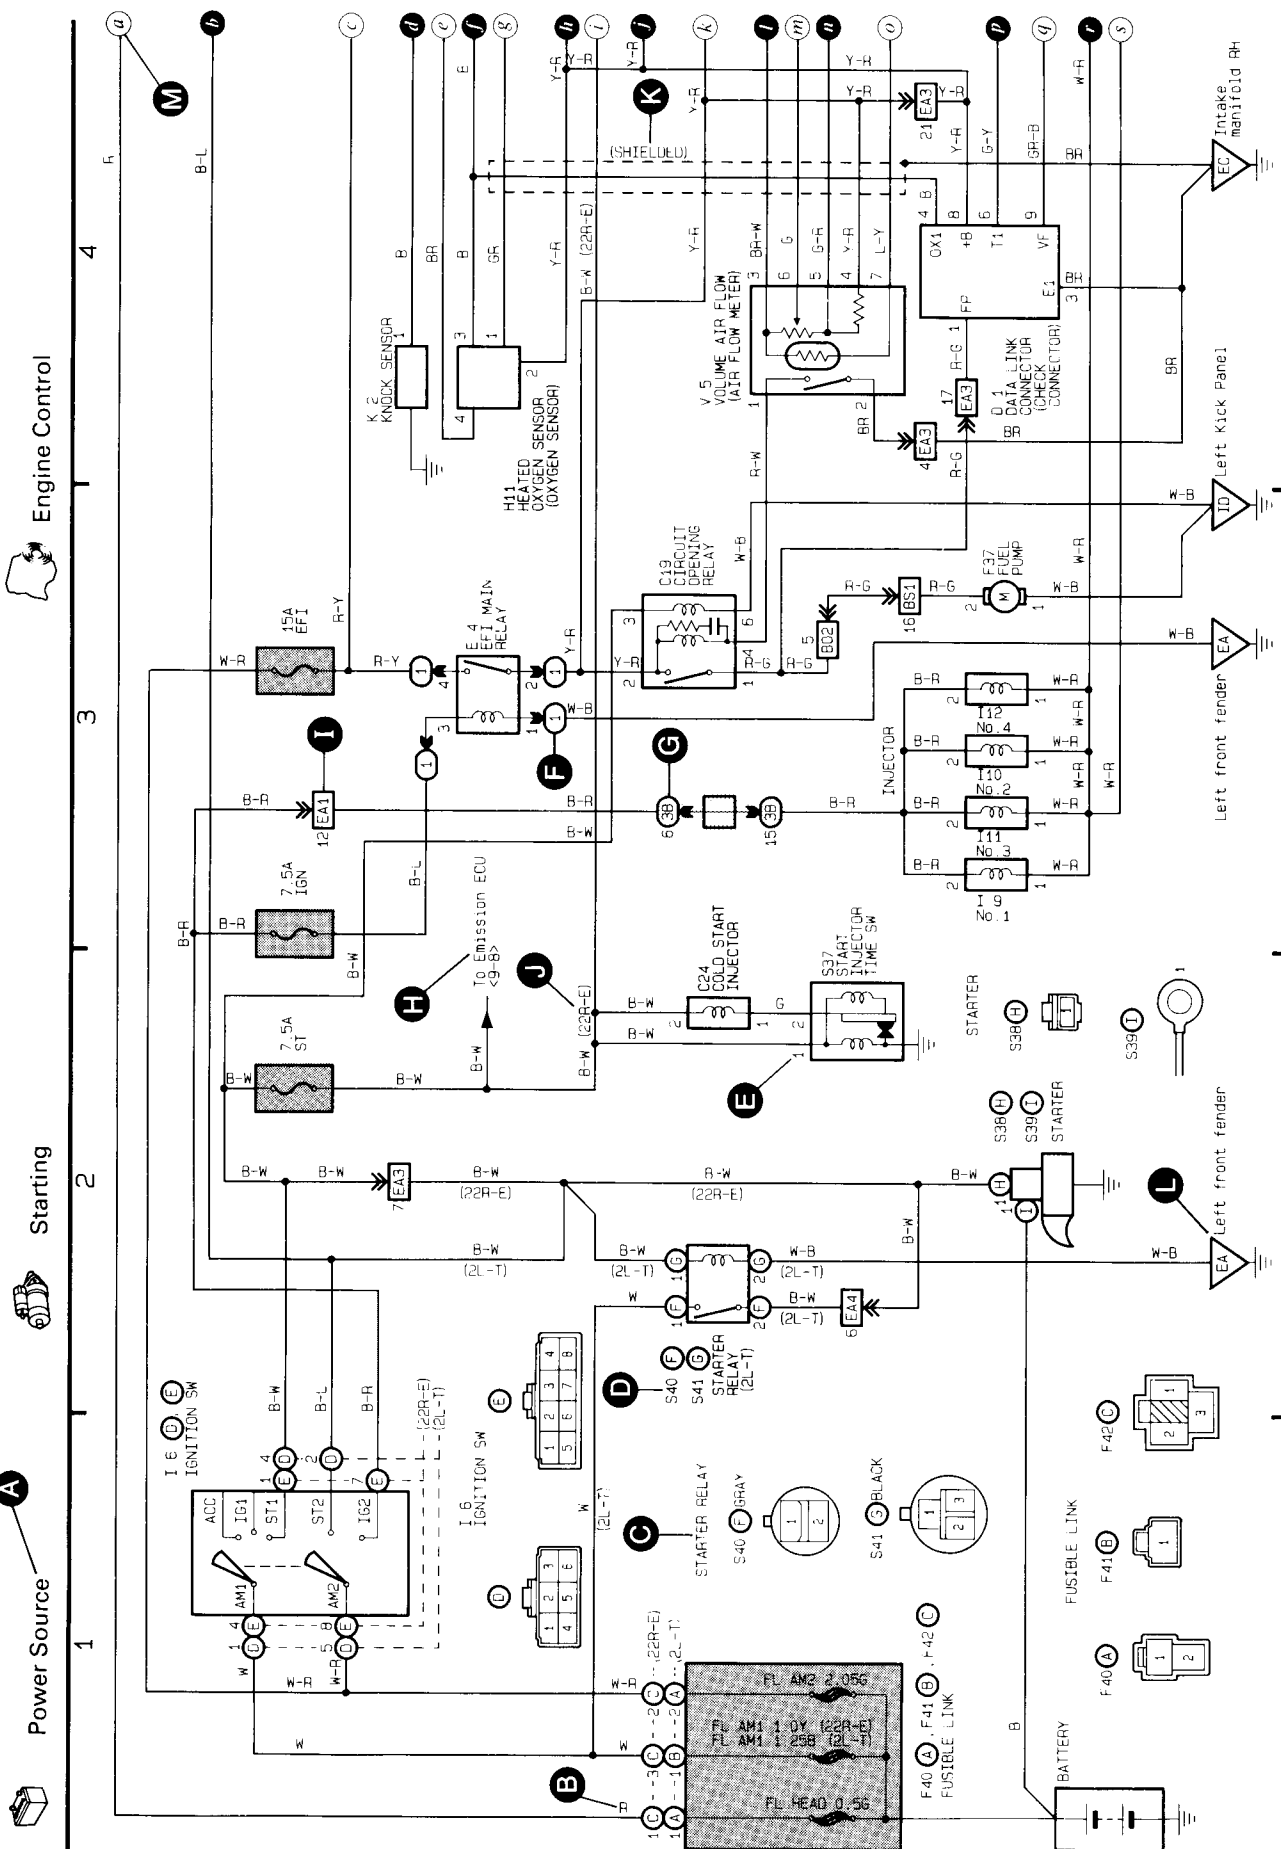

**A**: System Title

 
**B**: Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B = Black L = Blue R = Red  
 BR = Brown LG = Light Green V = Violet  
 G = Green O = Orange W = White  
 GR = Gray P = Pink Y = Yellow

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L - Y



**C**: Indicates the connector to be connected to a part (the numeral indicates the pin No.)

**D**: The position of the parts is the same as shown in the wiring diagram and wire routing.

 
**E**: Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example: Numbered in order from upper left to lower right



Female

Numbered in order from upper right to lower left



Male

The numbering system for the overall wiring diagram is the same as above.

**F**: Indicates a Relay Block. No Shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example: ① Indicates Relay Block No. 1.

**G**: Junction Block (The number in the circle is the J/B No. and connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts (different junction blocks are shaded differently for further clarification.).

Example:




3B indicates that it is inside Junction Block No. 3.

**H**: Indicates related system.

**I**: Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗).

Outside numerals are pin numbers.

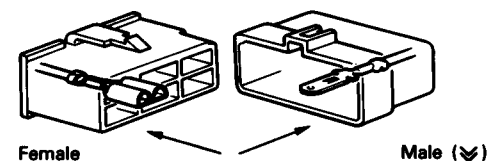

**J**: ( ) is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

**K**: Indicates a shielded cable.



**L**: Indicates and located on ground point.

**M**: The same code occurring on the next page indicates that the wire harness is continuous.

## SYSTEM INDEX

1995 Model (Location No. 1 to 20)

SYSTEMS	LOCATION	SYSTEMS	LOCATION	SYSTEMS	LOCATION
ABS (Anti-Lock Brake System)	19-2	Headlight	16-2 (for Canada) 6-4 (for USA)	Rear Wiper, Washer and Power Window (Rear)	14-2
Air Conditioning	2-3	Horn	15-2	Remote Control Mirror	11-4
Auto Antenna	13-2	Interior Light	7-3	Shift Lock	9-4
Back-Up Light	7-2	Light Auto Turn Off (w/ ABS)	15-4	Starting	1-2
Charging	1-4	Light Reminder Buzzer (w/o ABS)	15-4	Stop Light	12-4
Cigarette Lighter	15-3	Moon Roof	11-3	Taillight and Illumination	6-2
Clock	15-3	Overdrive	8-4	Turn Signal and Hazard Warning Light	11-2
Combination Meter	5-2	Power Source	1-20-1	Unlock and Seat Belt Warning	7-2
Cruise Control	20-2 (Motor Type) 12-2 (Vacuum Type)	Power Window (Front)	9-2	4WD	18-2
Door Lock Control	10-2	Radio and Player	13-2		
Electronically Controlled Transmission	8-2	Rear Heater	18-4		
Engine Control	3-2 (22R-E) 4-2 (3VZ-E)	Rear Wheel Anti-Lock Brake	17-2		
Front Wiper and Washer	13-4	Rear Window Defogger	14-4		