





POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

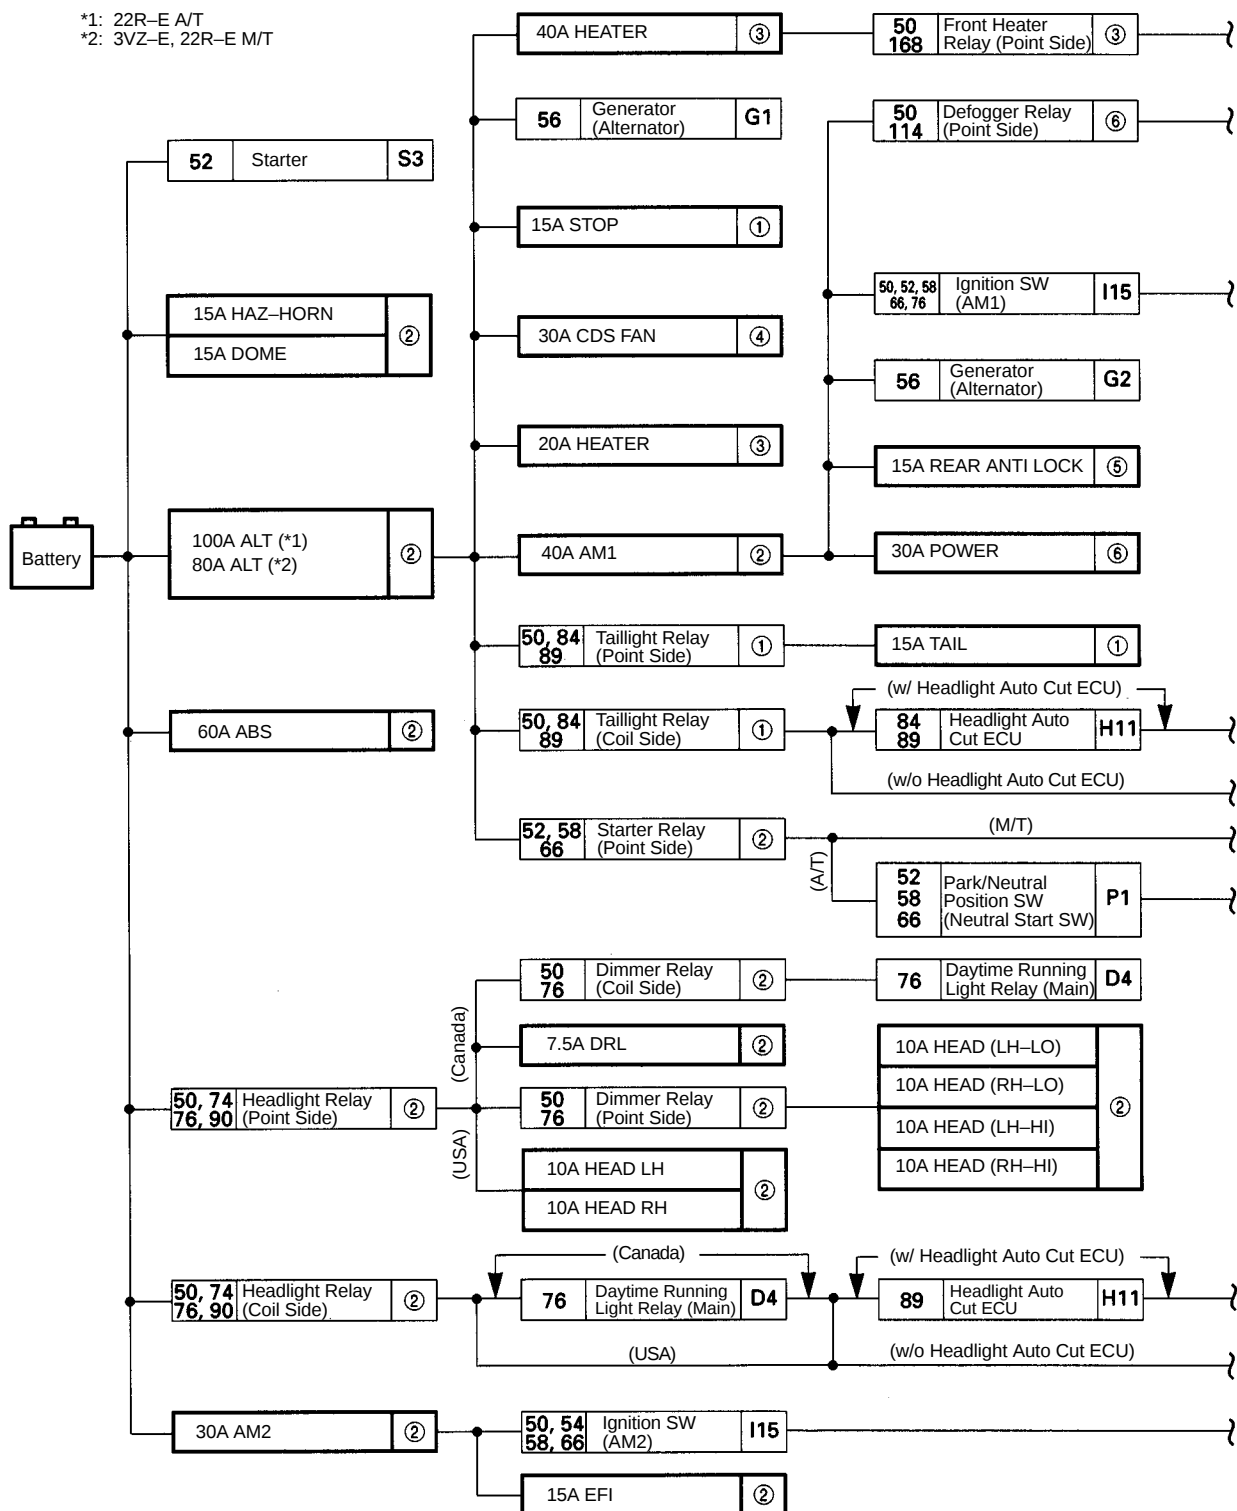

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 22) (3) : R/B No. 3 (See page 23)
(6) : Cassette Relay Block (C5 see on page 20)

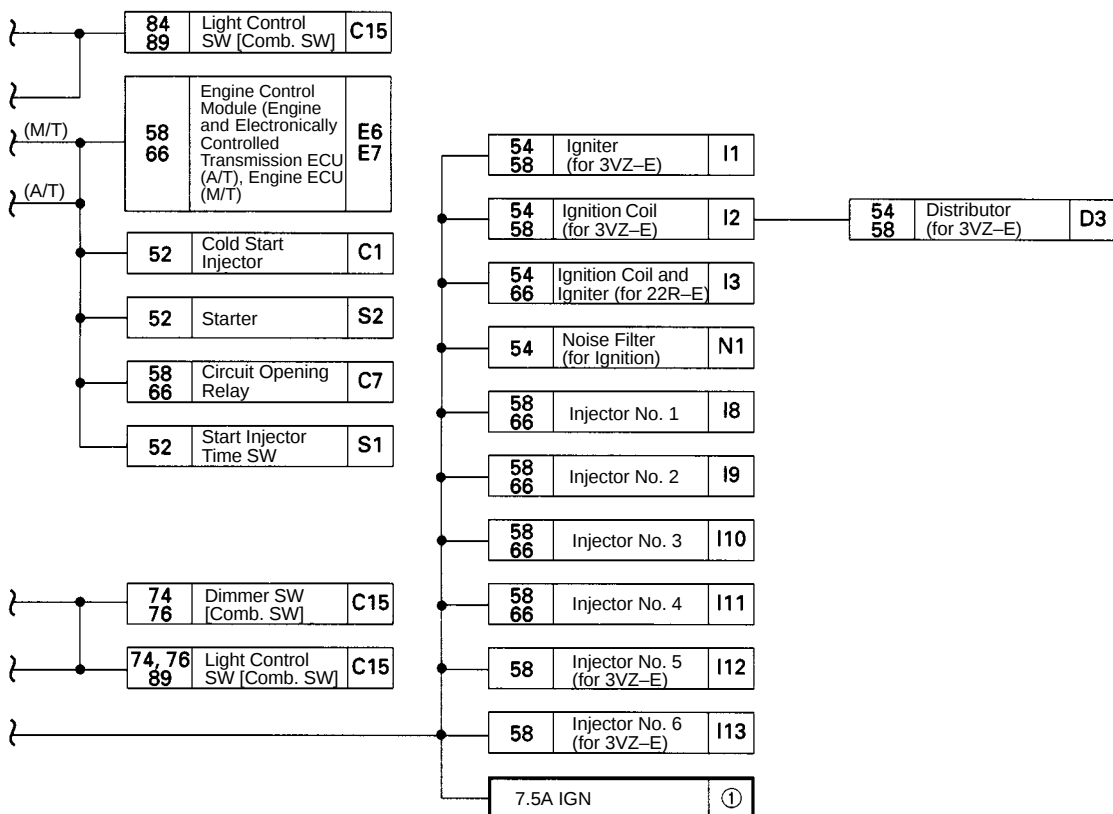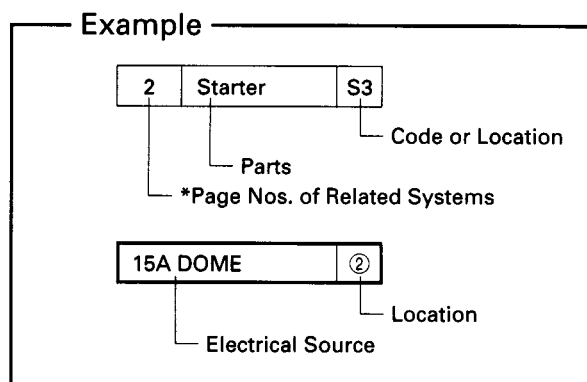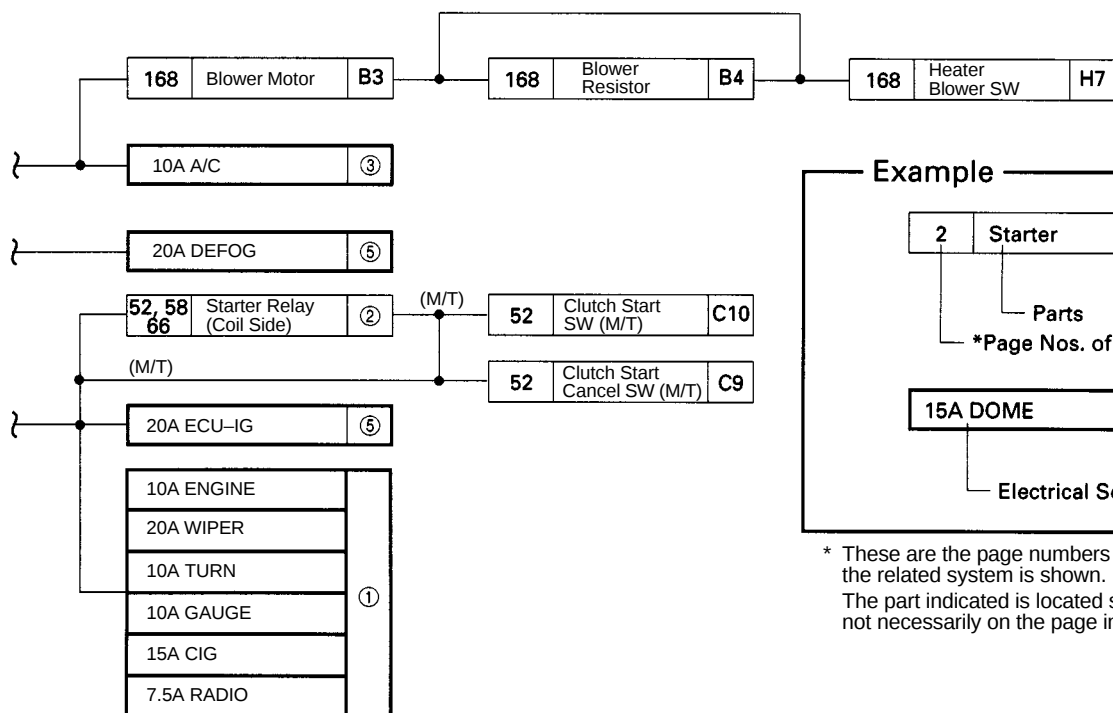

(4) : R/B No. 4 (See page 23)

(5) : Fuse Block (F5 see on page 20)

POWER SOURCE (Current Flow Chart)

*1: for Canada

Location			*Page Nos. of Related Systems		168	58 66 142 158 160	148	148 152	148	116	168			84 168	158 160	148 152	148	116	152					80	162
			Parts		A/C Condenser Fan Motor	ADD Indicator SW	ABS Actuator (Rear Wheel ABS)	ABS Check Connector	ABS Relay	Auto Antenna Motor	A/C Amplifier	A/C Cut Relay	A/C Thermistor and A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	A/C SW	ADD Control Relay	ABS Deceleration Sensor	ABS ECU (Rear Wheel ABS)	Auto Antenna Control Relay	ABS Relay (4 Wheel ABS)	ABS Actuator (4 Wheel ABS)	ABS ECU (4 Wheel ABS)	Back-Up Light SW (M/T)	Brake Fluid Level SW		
																								Code or Location	
CB or Fuse		A1	A5	A6	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	A18	A20	A21	A22	A24	A25	B1	B2			
①	10A	ENGINE																							
	20A	WIPER																							
	10A	TURN																							
	10A	GAUGE		●	●	●	●						●		●	●		●	●	●	●	●	●		
	15A	CIG																							
	7.5A	RADIO																							
	7.5A	IGN																							
	15A	STOP													●					●					
	15A	TAIL											●												
②	10A	HEAD (LH) (USA)																							
	10A	HEAD (RH) (USA)																							
	10A	HEAD (LH-LO) (*1)																							
	10A	HEAD (RH-LO) (*1)																							
	10A	HEAD (LH-HI) (*1)																							
	10A	HEAD (RH-HI) (*1)																							
	15A	HAZ-HORN																							
	15A	DOME							●											●					
	15A	EFI																							
	7.5A	DRL (*1)																							
	60A	ABS																●	●	●	●	●			
③	20A	HEATER																							
	10A	A/C								●	●	●	●												
	40A	HEATER																							
④	30A	CDS-FAN	●																						
⑤	20A	DEFOG																							
	20A	ECU-IG													●	●				●					
	15A	REAR ANTI LOCK			●		●									●									
⑥	30A	POWER																							

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 22) (3) : R/B No. 3 (See page 23)
(6) : Cassette Relay Block (C5 see on page 20)

POWER SOURCE (Current Flow Chart)

*1: for Canada

Location			*Page Nos. of Related Systems		58 142 158 160	136	74 76	76	92	141	98	136	130	58 66	76	76 162	76	84 114	158	96	76	102 107 108	96																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																					
					Parts		Code or Location																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																					
			CB or Fuse						4WD Indicator Light [Comb. Meter]	Cruise Control SW [Comb. SW]	Dimmer SW [Comb. SW]	Light Control SW [Comb. Meter]	Turn Signal SW [Comb. SW]	Horn SW [Comb. SW]	Wiper and Washer SW [Comb. Meter]	Cruise Control ECU	Cruise Control Main Relay	Cruise Control ECU	Data Link Connector 1 (Check Connector)	Daytime Running Light Resistor (for Canada)	Daytime Running Light Relay (Main)	Daytime Running Light Relay No. 4	Defogger SW	Diode (for ADD)	Diode (for Power Window)	Diode No. 1 (for Daytime Running Light System)	Diode No. 2 (for Daytime Running Light System)	Door Control Relay	Door Courtesy SW Front LH	Door Courtesy SW Front LH																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														
					C14	C15				C16	C19	C20	C21	D1	D2	D4	D5	D6	D7	D8	D9	D10	D11	D12	D13																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
①	10A	ENGINE		●								●	●	●																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 22) (3) : R/B No. 3 (See page 23)
(6) : Cassette Relay Block (C5 see on page 20)

*1: for Canada

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

44

96	94	96	107	162	142	84 142	80 142 158	162	102										168	84 116 118	84	92	82	84	92	82	92	166
Interior Light (for Rear)	Light Reminder Relay	Map Light	Moon Roof Control SW	Moon Roof Motor	Oil Pressure SW	Oil Temp. SW (for 4WD A/T 22R-E)	O/D Main SW	Park/Neutral Position SW (Neutral Start SW) and Back-Up Light SW (A/T)	Parking Brake SW	Power Window Control SW Front RH	Power Window Control SW Front LH	Power Window Control SW Rear RH	Power Window Master SW and Door Lock Control SW	Power Window Motor Front LH	Power Window Motor Front RH	Power Window Motor Rear LH	Power Window Motor Rear RH	Resistor (for Condenser Fan)	Radio and Player	Rheostat	Rear Turn Signal Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Taillight LH [Rear Comb. Light LH]	Rear Turn Signal Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Taillight RH [Rear Comb. Light RH]	Rear Heater	
I18	L1	M1	M2	M3	O1	O2	O4	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	R2	R4	R6	R7			R8			R9	

(4) : R/B No. 4 (See page23)

(5) : Fuse Block (F5 see on page20)

*1: for Canada

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

46

