


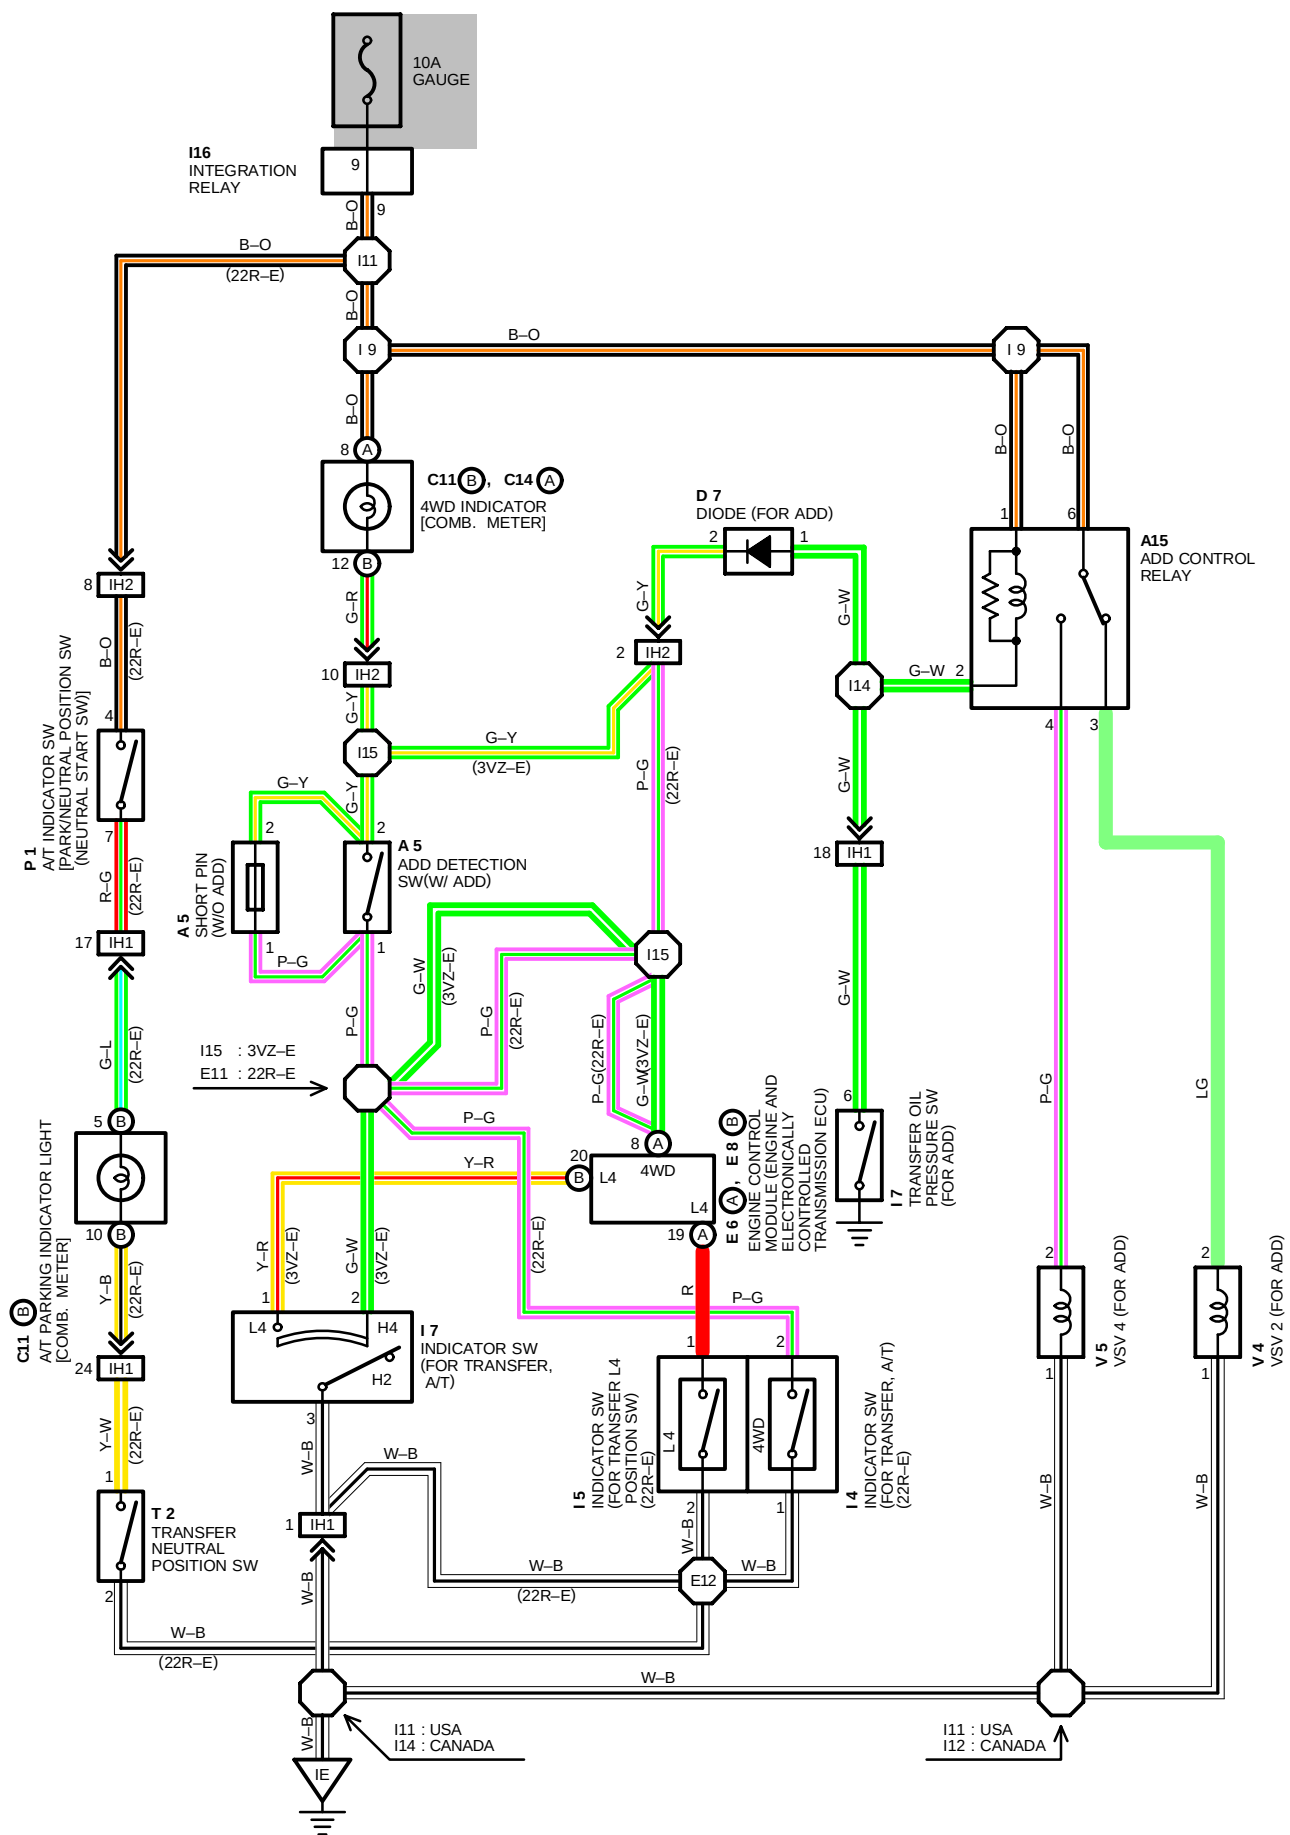

SERVICE HINTS

A15 ADD CONTROL RELAY

- 3-6 : CLOSED WITH IGNITION SW AT **OFF** POSITION OR IGNITION SW ON AND INDICATOR SW **H2** POSITION
 4-6 : CLOSED WITH IGNITION SW AT **ON** POSITION AND INDICATOR SW **H4** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 5	24 (3VZ-E)	E 6	A	28	P 1
	26 (22R-E)	E 8	B	28	T 2
A 15	28	I 4	27 (22R-E)	V 4	25 (3VZ-E)
C11 B	28	I 5	27 (22R-E)		27 (22R-E)
C14 A	28	I 7	25 (3VZ-E)	V 5	25 (3VZ-E)
D 7	28	I16	28		27 (22R-E)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IH1	34	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IH2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
IF	34	RIGHT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E11	32 (22R-E)	ENGINE WIRE	I12	34	COWL WIRE
E12	32 (22R-E)		I14		
I 9	34	COWL WIRE	I15	34	ENGINE WIRE
I11					


A 5 DARK GRAY



 
A15



C11 (B) BLUE

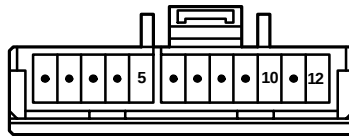


C14 (A)

 


D 7 BLACK




(3VZ-E) E 6 (A) DARK GRAY

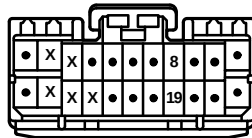


(22R-E) E 6 (A) DARK GRAY

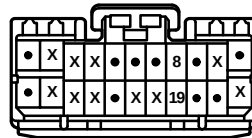

(3VZ-E) E 8 (B) DARK GRAY

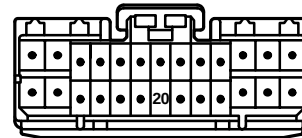

(22R-E) E 8 (B) DARK GRAY

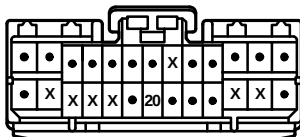

I 4 GRAY



 
I 5 BLUE




I 7 BLUE



I16



P 1 GRAY

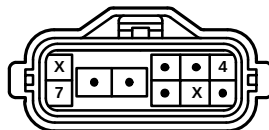

T 2 GRAY



V 4 BROWN



V 5 BLUE

