


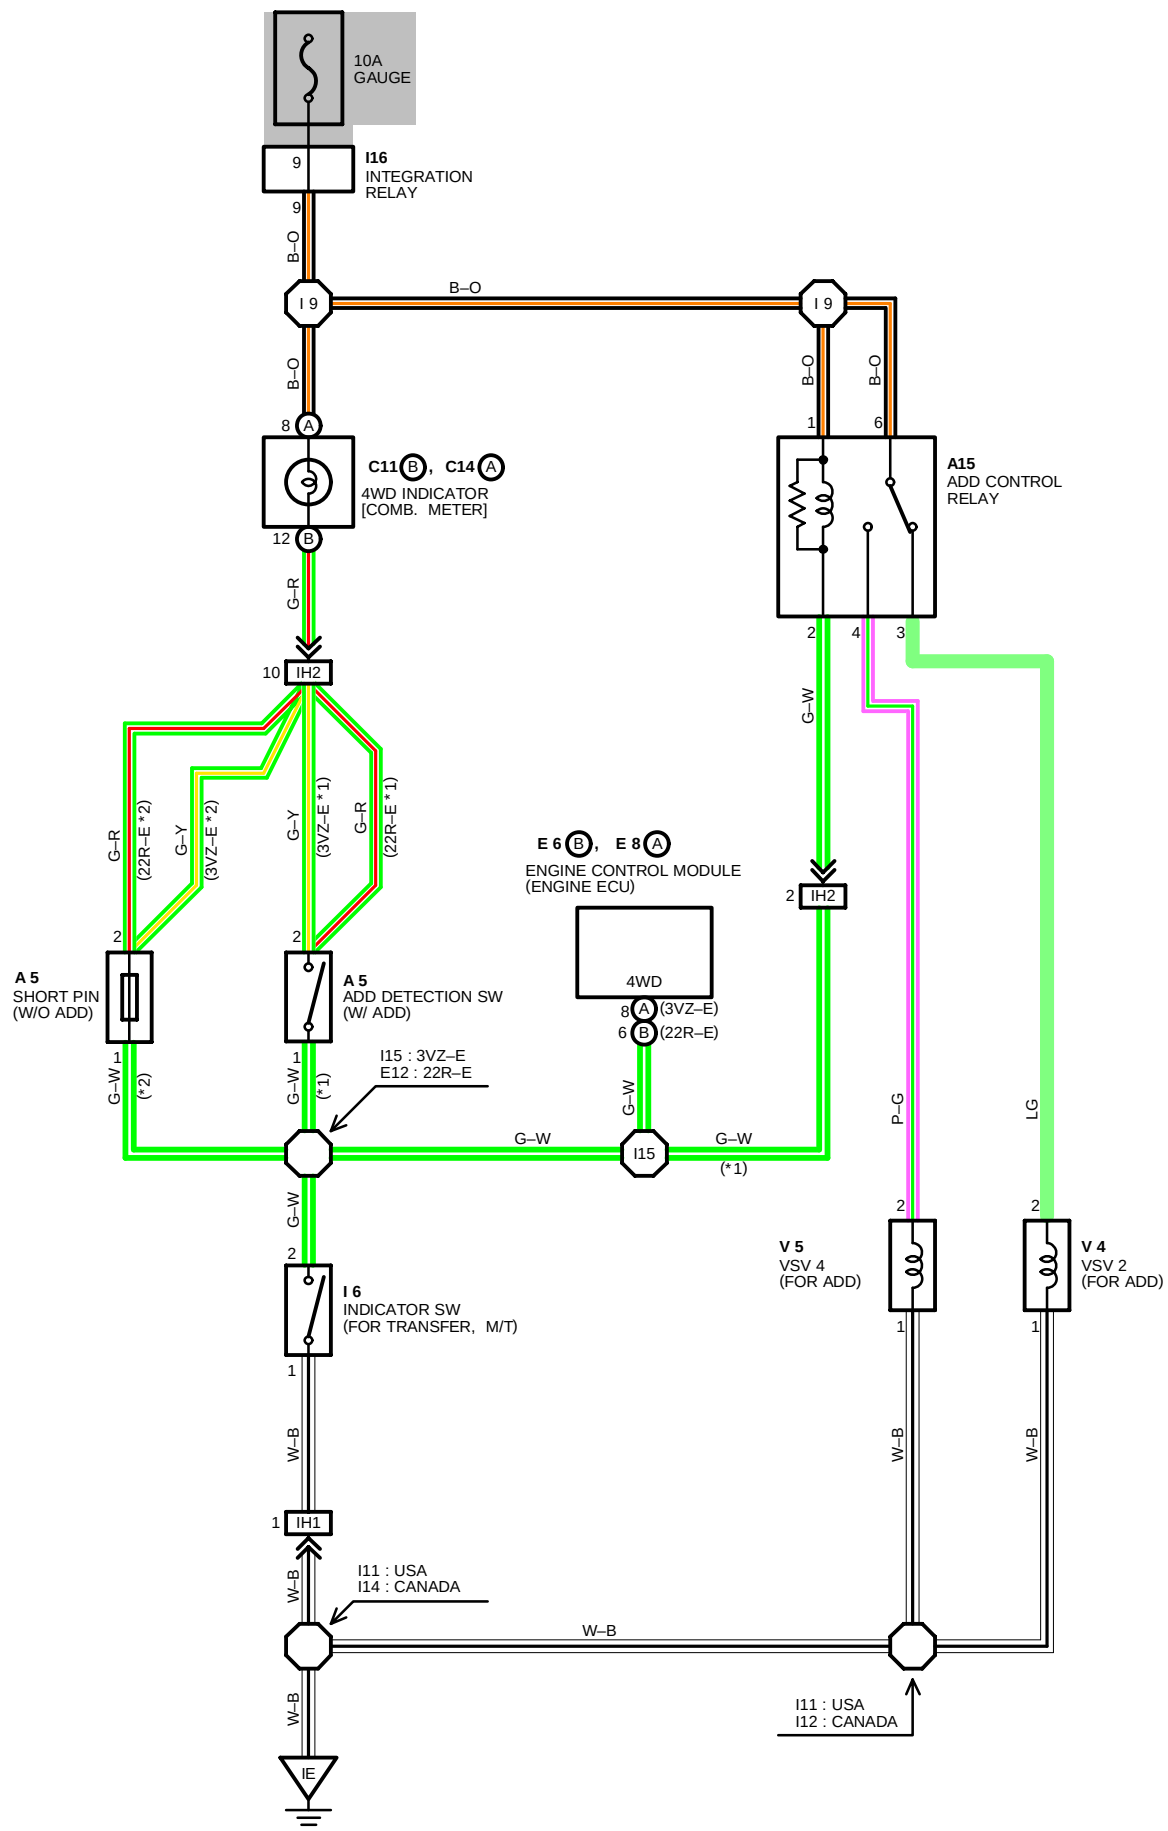

SERVICE HINTS

A15 ADD CONTROL RELAY

3-6: CLOSED WITH IGNITION SW AT **OFF** POSITION OR IGNITION SW ON AND INDICATOR SW **H2** POSITION

4-6: CLOSED WITH IGNITION SW AT **ON** POSITION AND INDICATOR SW **H4**

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 5	24 (3VZ-E)	E 6	B	28	V 4
	26 (22R-E)	E 8	A	28	
A15	28	I 6	25 (3VZ-E)	V 5	25 (3VZ-E)
C11	B		27 (22R-E)		27 (22R-E)
C14	A	I16	28		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IH1	34	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IH2		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
IF	34	RIGHT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E12	32 (22R-E)	ENGINE WIRE	I12	34	COWL WIRE
I 9	34	COWL WIRE	I14		ENGINE WIRE
I11			I15	34	

 
A 5 DARK GRAY




A15

 


C11 (B) BLUE

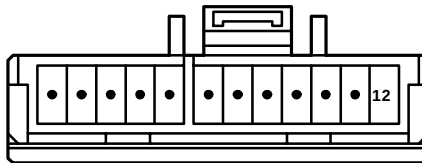


C14 (A)

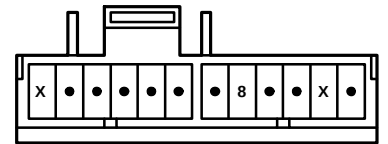


(22R-E) **E 6** (B) DARK GRAY

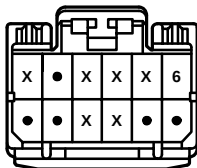


(3VZ-E) **E 8** (A) DARK GRAY

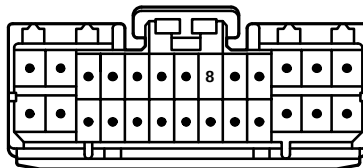

I 6 GRAY

 

I16

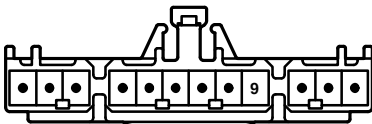

V 4 BROWN



V 5 BLUE

