

SERVICE HINTS

A18 AUTO ANTENNA CONTROL RELAY

- 1-GROUND : ALWAYS APPROX. 12 VOLTS
- 5-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION
- 6-GROUND : ALWAYS CONTINUOUS
- 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION AND RADIO SW ON AND
PLAYER SW OFF UNTIL ANTENNA AT **UPPERMOST** POSITION
- 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION AND RADIO SW OFF AND
PLAYER SW ON UNTIL ANTENNA AT **LOWERMOST** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A10	24 (3VZ-E)	A18	28	R 4	28
	26 (22R-E)	I16	28		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB2	30 (3VZ-E)	COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2)
	32 (22R-E)	


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I3	34	COWL WIRE	I9	34	COWL WIRE


A10 GRAY

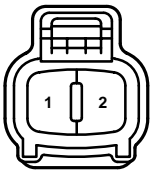

A18



I16

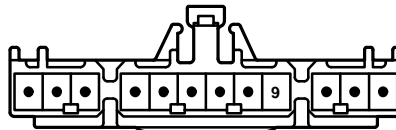

R 4 BLUE

