


CIGARETTE LIGHTER AND CLOCK

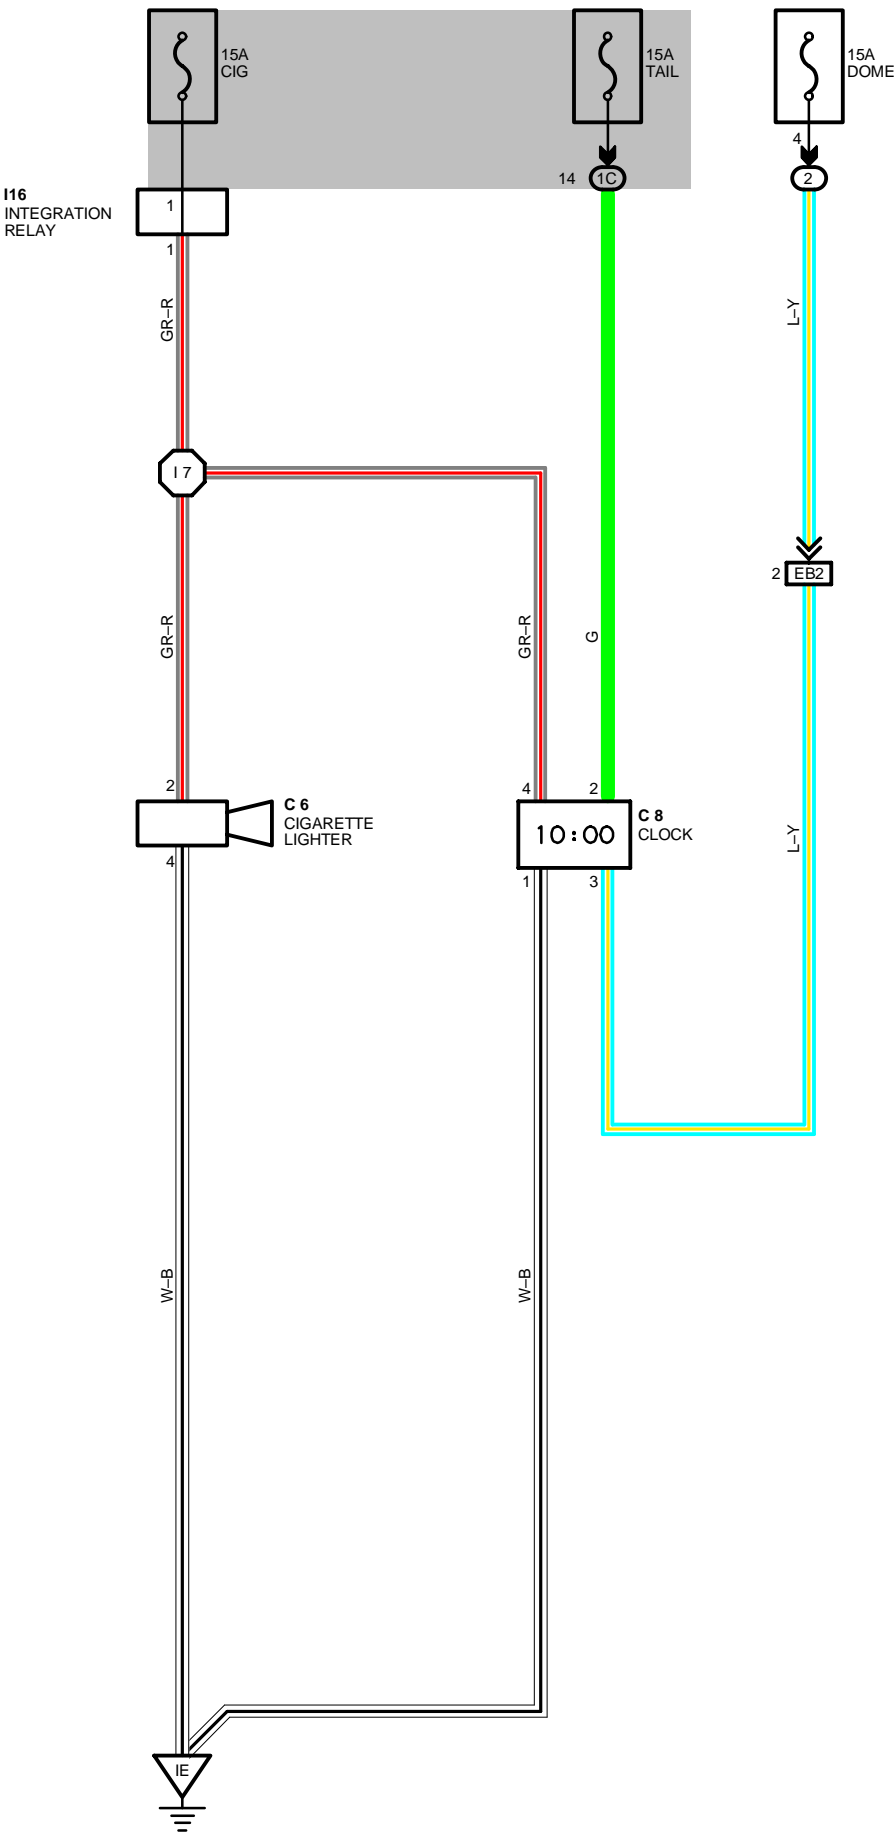

SERVICE HINTS

C 6 CIGARETTE LIGHTER

- 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** OR **ACC** POSITION
 4-GROUND : ALWAYS CONTINUOUS

C 8 CLOCK

- 3-GROUND : ALWAYS APPROX. 12 VOLTS (POWER FOR CLOCK)
 4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** OR **ACC** POSITION (POWER FOR INDICATION)
 2-GROUND : APPROX. 12 VOLTS WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
 1-GROUND : ALWAYS CONTINUOUS

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 6	28	C 8	28	I16	28

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB2	30 (3VZ-E)	COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2)
	32 (22R-E)	


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 7	34	COWL WIRE			

 C 6



C 8 BLUE



I16

