



SERVICE HINTS

D12, D13, D18, D19 DOOR COURTESY SW

1-GROUND: CLOSED WITH DOOR OPEN

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 6	29	D14	29	I14	28
B 7	29	D16	29	I16	28
D 8	28	D17	29	I17	29
D12	28	D18	29	I18	29
D13	28	D19	29	M 1	29

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1D	20	ROOF WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB2	30 (3VZ-E) 32 (22R-E)	COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2)
IF1	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
II1	34	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BK1	36	FLOOR NO. 3 LH WIRE AND COWL WIRE (LEFT SIDE OF FRONT LH SEAT)
BM1	36	FLOOR NO. 3 RH WIRE AND COWL WIRE (RIGHT SIDE OF FRONT RH SEAT)
BQ1	36	FLOOR NO. 3 LH WIRE AND FLOOR NO. 2 WIRE (LEFT SIDE OF REAR LH SEAT)
BS1	36	LUGGAGE ROOM WIRE AND FLOOR NO. 2 WIRE (UNDER LEFT REAR PILLAR)
BT1	36	BACK DOOR NO. 1 WIRE AND FLOOR NO. 2 WIRE (BESIDE LEFT REAR COMB. LIGHT)
BU1	36	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
BG	36	UNDER LEFT REAR PILLAR

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 3	34	COWL WIRE	B 1	36	ROOF WIRE
I 9			B 6	36	FLOOR NO. 2 WIRE
I12			B15	36	BACK DOOR NO. 2 WIRE
I14			B16		

B 6



B 7



D 8 BLACK



D12, D13



D14 BLACK



 
D16, D17 BLUE




D18, D19




I14 BLUE



I16

 

I17

 

I18



M 1

