

## RECEIVER

(See page [AC-7](#))


### ON-VEHICLE INSPECTION

**CHECK SIGHT GLASS, FUSIBLE PLUG AND FITTINGS FOR LEAKAGE**

Use a gas leak tester. Repair as necessary.

### REMOVAL OF RECEIVER

1. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM
2. DISCONNECT TWO LIQUID TUBES FROM RECEIVER  
HINT: Cap the open fittings immediately to keep moisture out of the system.
3. REMOVE RECEIVER FROM RECEIVER HOLDER

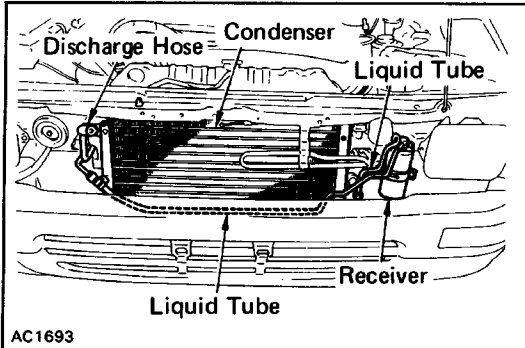

### INSTALLATION OF RECEIVER

1. INSTALL RECEIVER IN RECEIVER HOLDER  
HINT: Do not remove the caps until ready for connection.
2. CONNECT TWO LIQUID TUBES TO RECEIVER  
Torque: 5.4 N·m (55 kgf·cm, 43 in·lbf)
3. IF RECEIVER WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR  
Add 20 cc (0.7 fl. oz.)  
Compressor oil: ND OIL6,  
SUNISO No.5GS or equivalent
4. EVACUATE AIR FROM AIR CONDITIONING SYSTEM
5. CHARGE AIR CONDITIONING SYSTEM WITH REFRIGERANT AND CHECK FOR GAS LEAKAGE  
Specified amount: 700 – 800 g (1.5 – 1.8 lb)