

AC1697

## AC SWITCH


### ON-VEHICLE INSPECTION

1. DISCONNECT NEGATIVE CABLE FROM BATTERY
2. REMOVE GLOVE BOX
3. REMOVE A/C SWITCH
4. CHECK A/C SWITCH FOR CONTINUITY


Using an ohmmeter, check for continuity between the terminals for each switch position shown in the table.

If there is no continuity, replace the A/C switch.

5. INSTALL A/C SWITCH
6. INSTALL GLOVE BOX
7. CONNECT NEGATIVE CABLE TO BATTERY

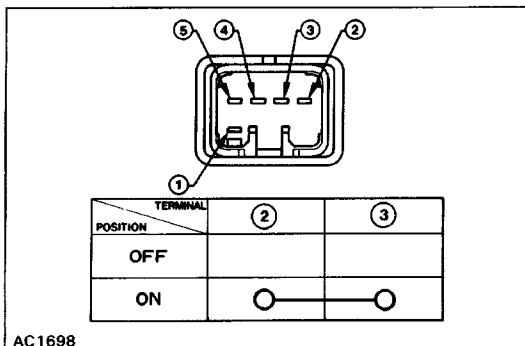

AC1698

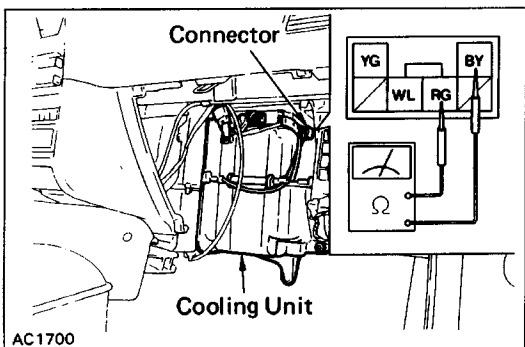

AC1700


## PRESSURE SWITCH

### INSPECTION OF DUAL PRESSURE SWITCH

#### ON-VEHICLE INSPECTION

1. DISCONNECT NEGATIVE CABLE FROM BATTERY
2. REMOVE GLOVE BOX
3. INSPECT PRESSURE SWITCH

- (a) Install the manifold gauge set.
- (b) Observe the gauge reading.
- (c) Check the continuity between the two terminals of the pressure switch shown in the below.

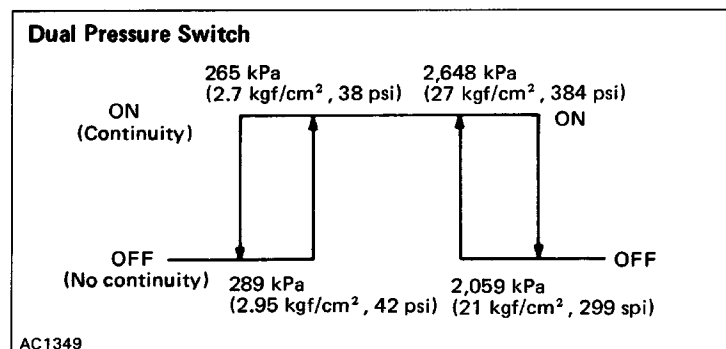

AC1349

If defective, replace the pressure switch.