


REMOVAL AND INSTALLATION OF TRANSMISSION (2WD)

Remove and install the parts as shown

HINT: For the transmission with a transfer (4WD) refer to REMOVAL AND INSTALLATION OF TRANSMISSION WITH TRANSFER on Page MT1-14.

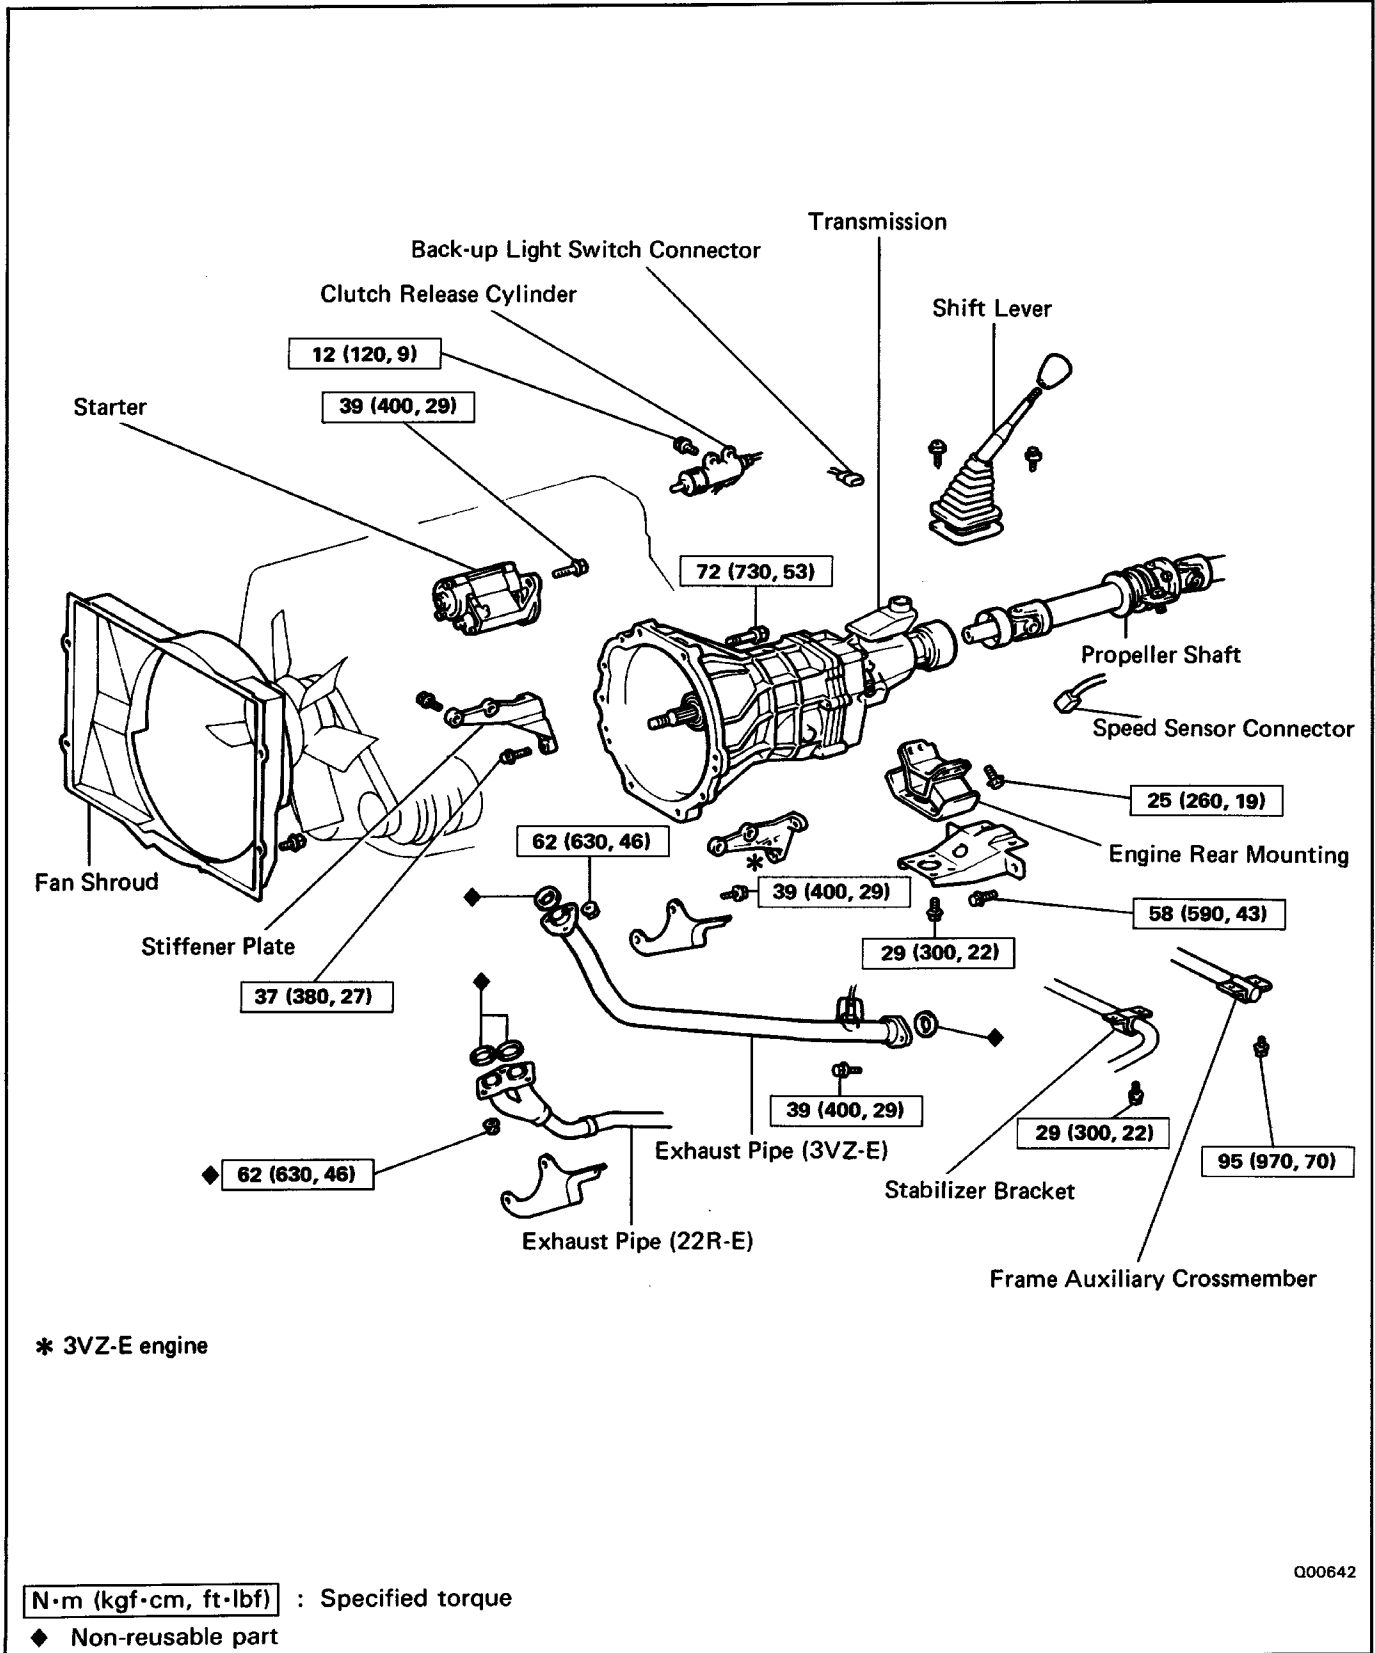

* 3VZ-E engine

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part