


# TURN SIGNAL AND HAZARD WARNING SYSTEM PARTS LOCATION

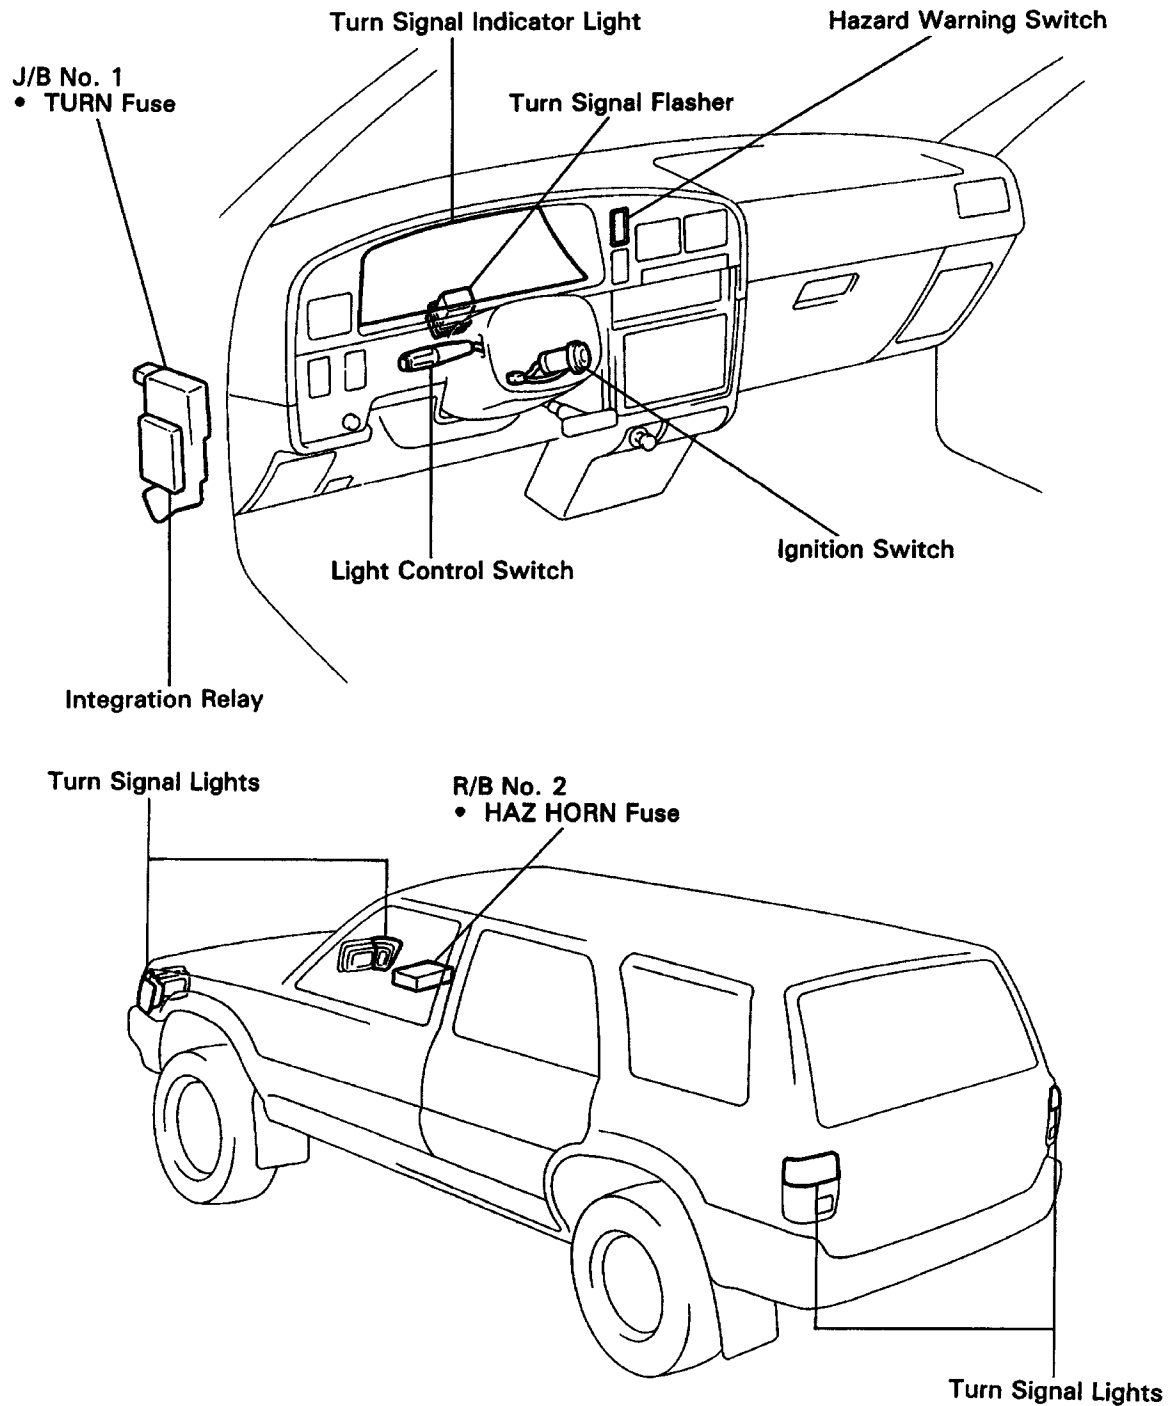

## TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.


Trouble	Parts name	(See page)
"Hazard" and "Turn" do not light up	1. Hazard Warning Switch 2. Turn Signal Flasher 3. Wire Harness	(BE-29) (BE-29)
The flashing frequency is abnormal	1. Bulb 2. Turn Signal Switch 3. Wire Harness	(BE-21)
Hazard warning light does not light up (Turn signal is normal)	1. HAZ-HORN Fuse 2. Wire Harness	(BE-11)
Hazard warning light does not light up in one direction	1. Hazard Warning Switch 2. Wire Harness	(BE-29)
*1 Turn signal does not light up	1. Ignition Switch 2. TURN Fuse 3. Turn Signal Switch 4. Wire Harness	(BE-12) (BE-11) (BE-21)
*2 Turn signal does not light up	1. TURN Fuse 2. Turn Signal Switch 3. Wire Harness	(BE-11) (BE-21)
Turn signal does not light up in one direction	1. Turn Signal Switch 2. Wire Harness	(BE-21)
Only one bulb does not light up	1. Bulb 2. Wire Harness	

\*1: Combination Meter, Wiper and Washer do not operate.

\*2: Combination Meter, Wiper and Washer are normal.

## TURN SIGNAL SWITCH INSPECTION

See Headlight Dimmer and Turn Signal Switch on page [BE-21](#)

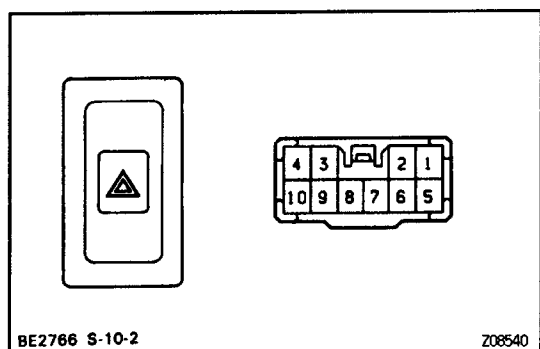


## HAZARD WARNING SWITCH INSPECTION

### INSPECT HAZARD WARNING SWITCH CONTINUITY

Switch position	Tester connection to terminal number	Specified condition
Switch OFF	7 – 10	Continuity
Switch ON	4 – 5 – 6 – 9 7 – 8	Continuity
Illumination circuit	2 – 3	Continuity

If continuity is not as specified, replace the switch.

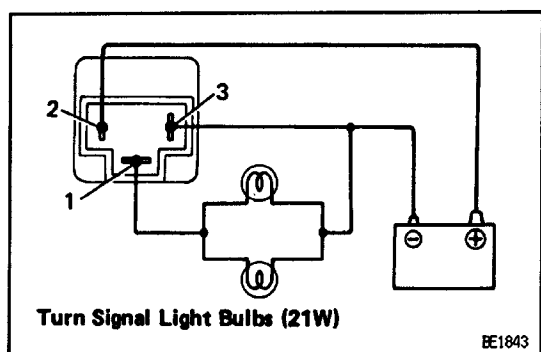

## TURN SIGNAL FLASHER INSPECTION

### INSPECT TURN SIGNAL FLASHER OPERATION

- Connect the positive (+) lead from the battery to terminal 2 and the negative (–) lead to terminal 3.
- Connect the 2 turn signal light bulbs in parallel to each other to terminals 1 and 3, check that the bulbs flash.  
HINT: The turn signal lights should flash 60 to 120 times per minute.

If one of the front or rear turn signal lights has an open circuit, the number of flashes will be more than 140 per minute.

If operation is not as specified, replace the flasher.