


HOOD

HOOD ADJUSTMENT


HINT: Since the centering bolt is used as the hood hinge set bolt, the hood cannot be adjusted with it on. Substitute the bolt with the washer for the centering bolt.

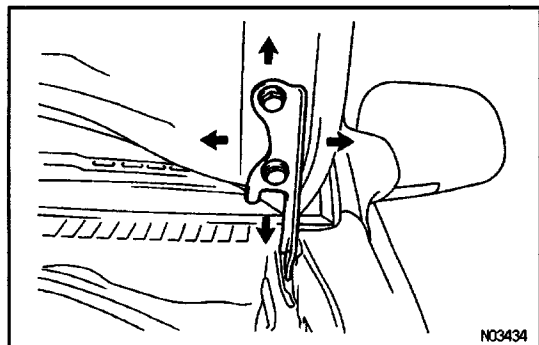

1. ADJUST HOOD IN FORWARD/ REARWARD AND LEFT/ RIGHT DIRECTIONS


Adjust the hood by loosening the hood side hinge bolts.

Torque: 23 N-m (230 kgf-cm, 17 ft-lbf)

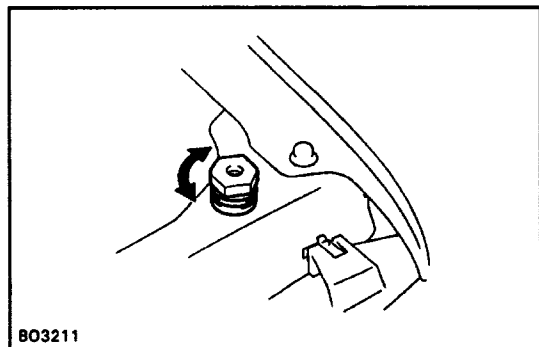

2. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by turning the cushions.

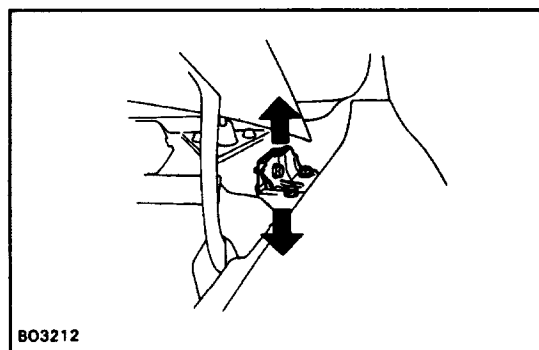


3. REMOVE WIPER ARMS

4. REMOVE COWL PANEL

Remove the 2 clips, 3 screws and the cowl panel.

5. ADJUST REAR EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by loosening the hood hinge bolts.

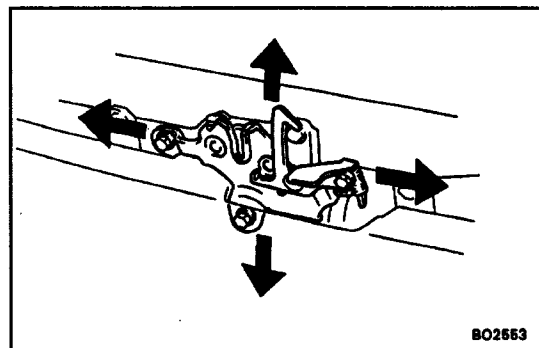

6. ADJUST HOOD LOCK

Adjust the lock by loosening the bolts.

Torque: 8.0 N-m (75 kgf-cm, 85 in.-lbf)