


WHEEL ARCH MOULDING COMPONENTS

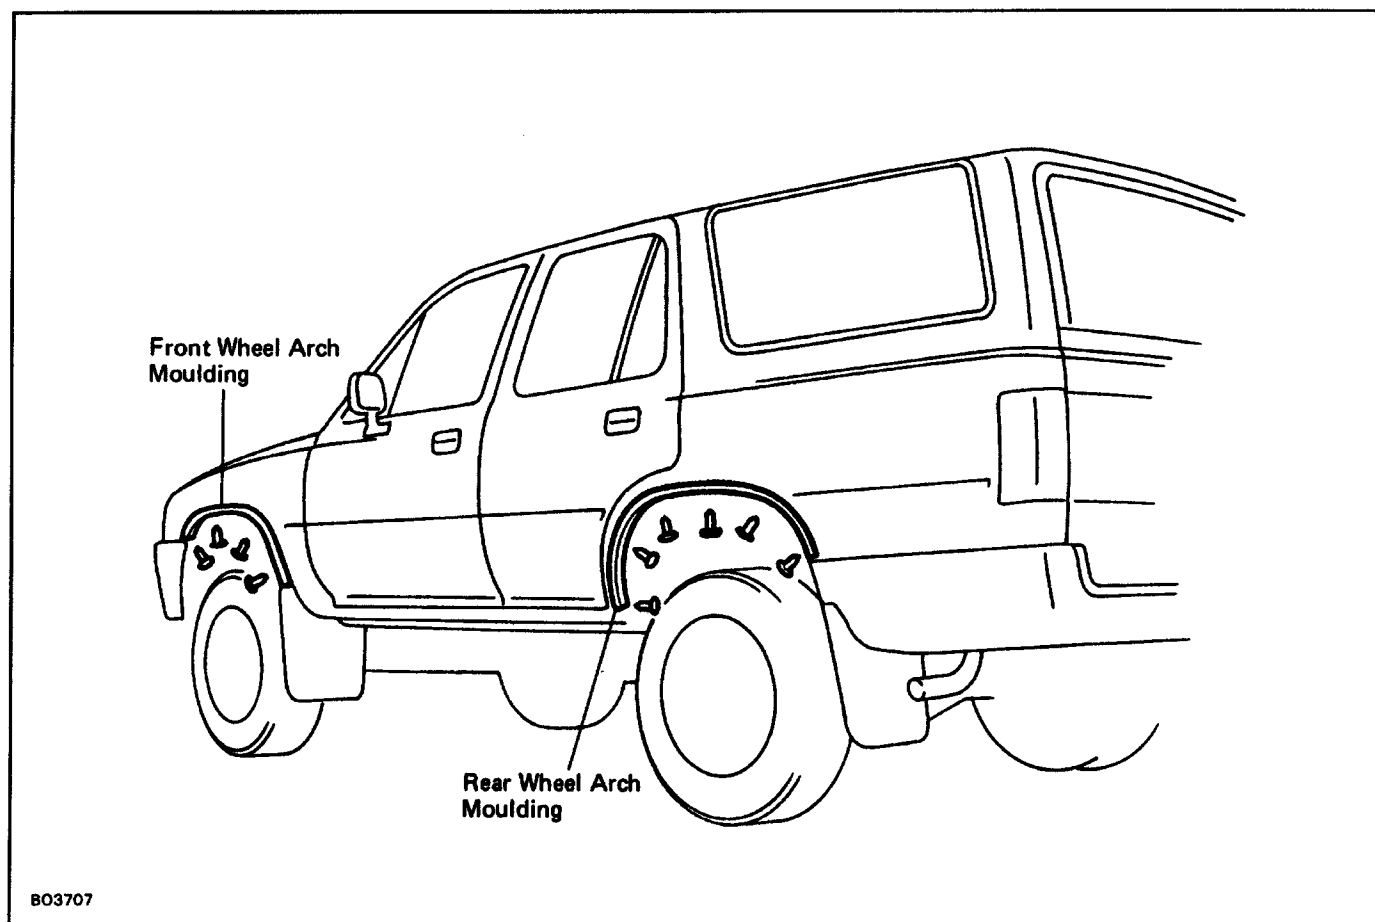

FRONT WHEEL ARCH MOULDING REPLACEMENT

1. REMOVE FRONT WHEEL ARCH MOULDING

- (a) Remove the 4 screws.
- (b) Using a screwdriver, pry up the wheel arch moulding and remove it.

HINT: Tape the screwdriver tip before use.

2. INSTALL FRONT WHEEL ARCH MOULDING

- (a) Tap the wheel arch moulding by hand to install it.
- (b) Install the 4 screws.

REAR WHEEL ARCH MOULDING REPLACEMENT

1. REMOVE REAR WHEEL ARCH MOULDING

- (a) Remove the 6 screws.
- (b) Using a screwdriver, pry up the wheel arch moulding and remove it.

HINT: Tape the screwdriver tip before use.

2. INSTALL REAR WHEEL ARCH MOULDING

- (a) Tap the wheel arch moulding by hand to install it.
- (b) Install the 6 screws.