
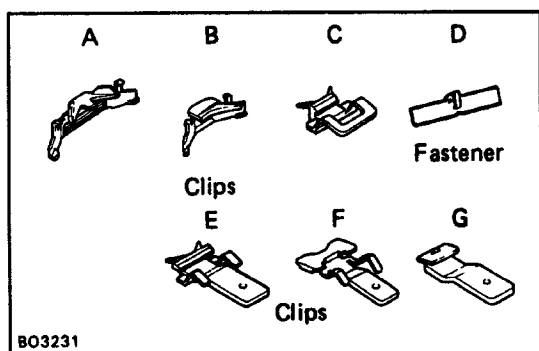


WINDSHIELD MOULDING COMPONENTS

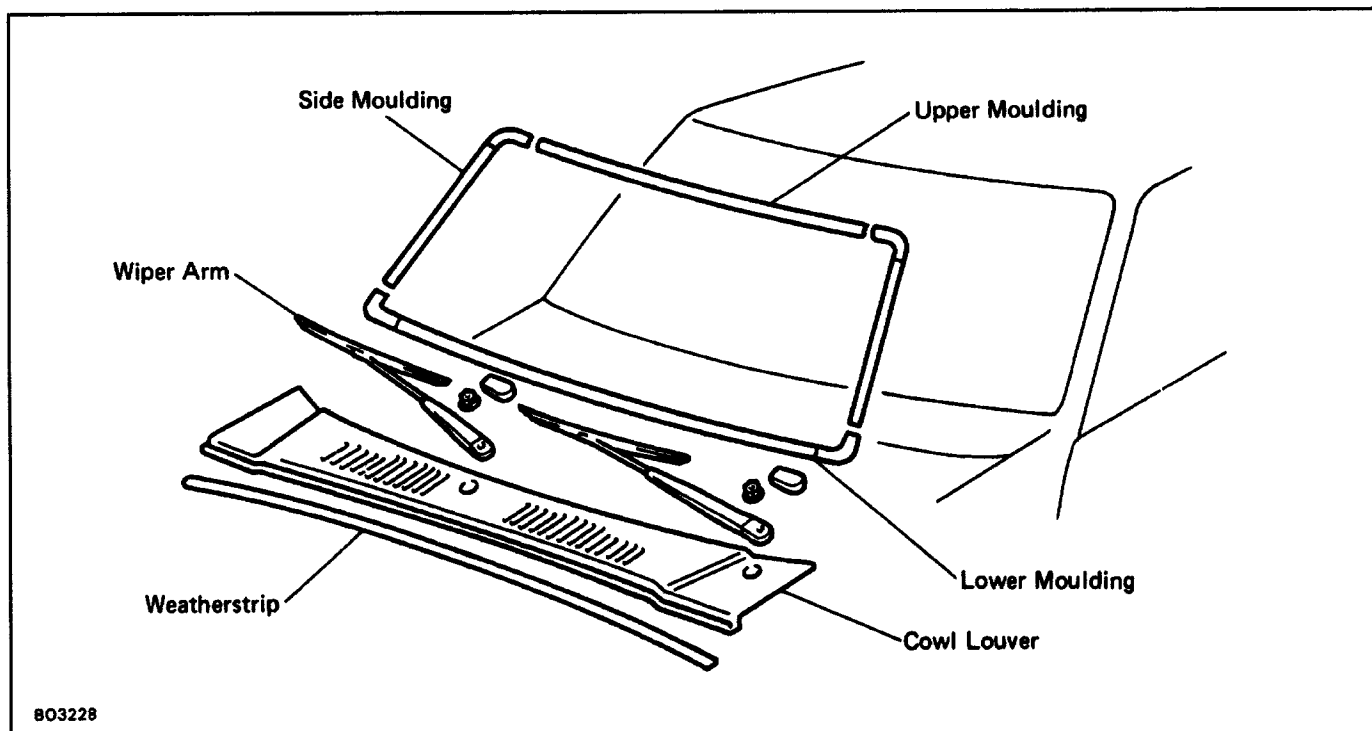


WINDSHIELD MOULDING REMOVAL


LOCATION OF CLIPS AND FASTENER

- For vehicles which have black moulding, refer to diagram Type I .
- For vehicles which have metallic moulding, refer to diagram Type II.
- However, if all clips and fasteners are replaced, either diagram Type I or Type II may be referred to.

Type I (Black Moulding)

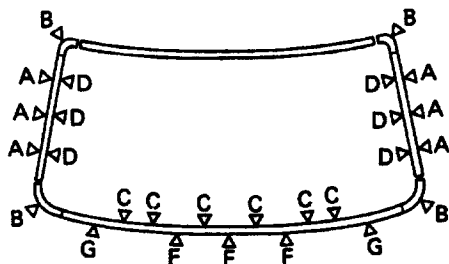


Type II (Metallic Moulding)

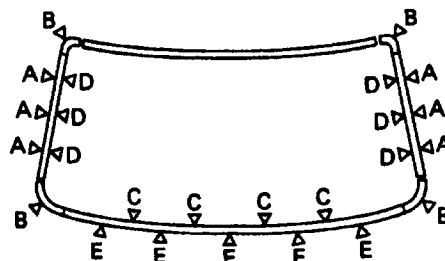


1. REMOVE WIPER ARMS
2. REMOVE COWL LOUVER AND WEATHERSTRIP
3. REMOVE LOWER MOULDING WITH LOWER JOINT COVERS

- (a) Remove the 5 screws from the clips.
- (b) Pry up a scraper to loosen the clips from the body.
- HINT: Tape the scraper tip before use.
- (c) Remove the moulding with lower joint covers and clips.

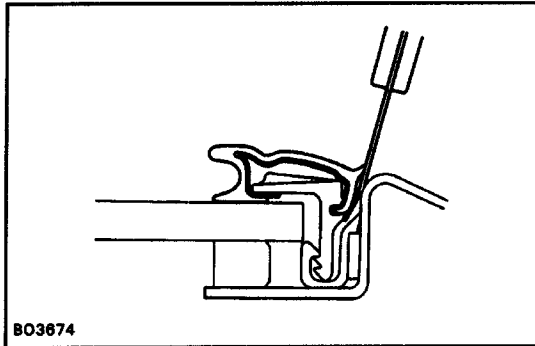

4. REMOVE SIDE MOULDING WITH UPPER JOINT COVERS


- (a) Insert the tip of a scraper between the body and moulding.
- HINT: Tape the scraper tip before use.
- (b) Pry up the scraper to loosen the moulding from the claws of the clips and fasteners.
- (c) Remove the moulding with upper joint covers.

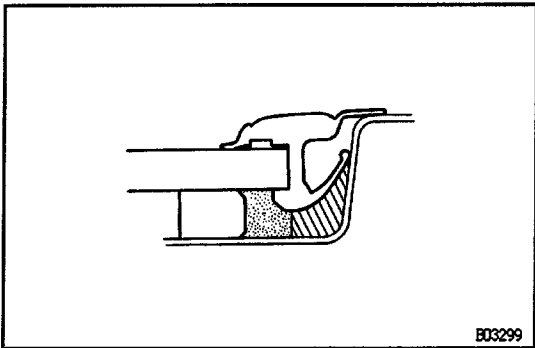

5. REMOVE UPPER MOULDING

- (a) Using a knife, cut off the upper moulding, as shown.
- (b) Cut off the old adhesive around the upper moulding installation area.

NOTICE: Do not damage the body and glass.

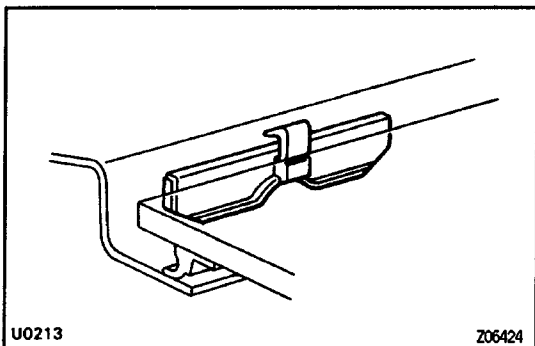

FASTENER REPLACEMENT

REPLACE FASTENER

- (a) Remove the damaged fastener.
- (b) Cut off the old adhesive around the fastener installation area.
- NOTICE:** Be carefully not to damage the body.
- (c) Clean the installation area.
- (d) Install new fastener onto the body.

WINDSHIELD MOULDING INSTALLATION


1. INSTALL CLIP INTO MOULDING


Install the clip to the appropriate place on the moulding.

2. APPLY ADHESIVE AT CLIP INSTALLATION AREA

- (a) Cut out the old adhesive around the clip installation area.

NOTICE: Do not damage the body and fastener.

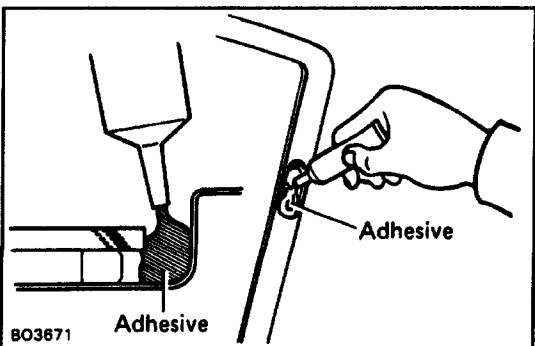

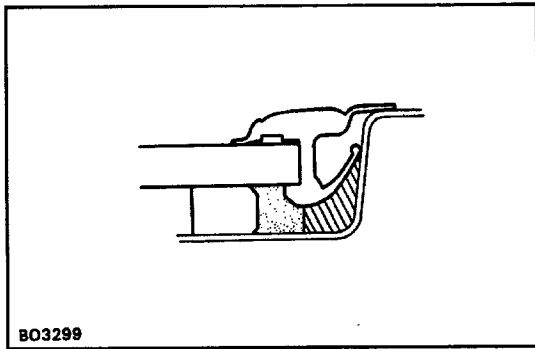


- (b) Apply adhesive at the clip installation area so water does not accumulate there.

3. APPLY ADHESIVE AT UPPER MOULDING INSTALLATION AREA

4. INSTALL NEW UPPER MOULDING

- Place the moulding onto the body and tap it by hand.

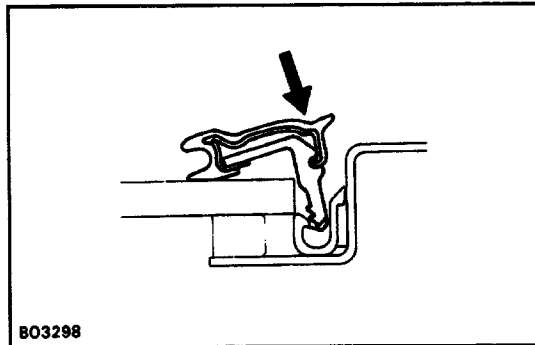

5. INSTALL SIDE MOULDING WITH UPPER JOINT COVERS

- (a) Place the moulding with upper joint covers onto the body.
(b) Tap the moulding by hand to install it.
(c) Pry up the clips on the body side, and install them to the moulding.

6. INSTALL LOWER MOULDING WITH LOWER JOINT COVERS

- (a) Place the moulding with lower joint covers onto the body.
(b) Align the clips of the moulding with the body holes, and push the moulding on the body.

7. INSTALL COWL LOUVER AND WEATHERSTRIP

8. INSTALL WIPER ARMS