



# COLD START INJECTOR TIME SWITCH

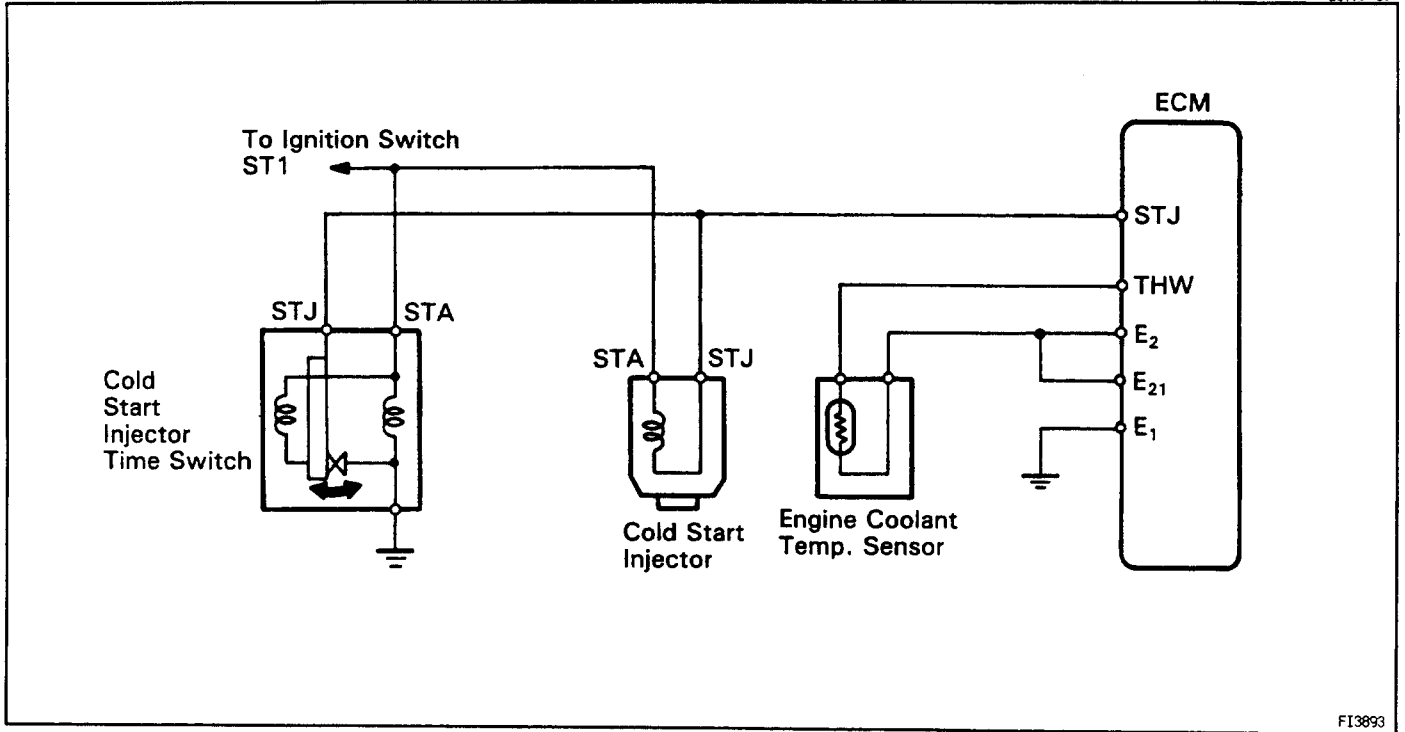

FI3893

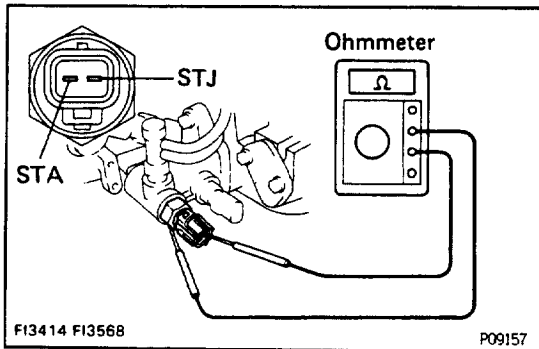

## START INJECTOR TIME SWITCH INSPECTION

### MEASURE RESISTANCE OF START INJECTOR TIME SWITCH

- (a) Disconnect the connector.
- (b) Using an ohmmeter, measure the resistance between terminals.

Between terminals	Resistance ( $\Omega$ )	Coolant temperature
STA-STJ	30-50	below 10°C (50°F)
	65-90	above 30°C (86°F)
STA-Ground	30-90	-