

EGR GAS TEMPERATURE SENSOR

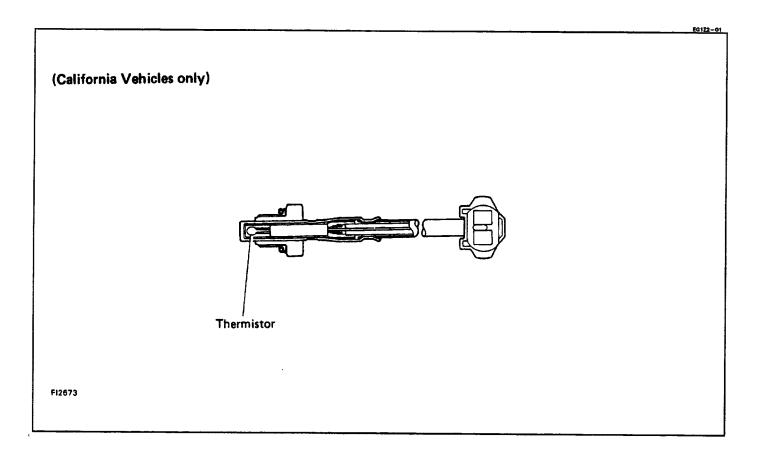

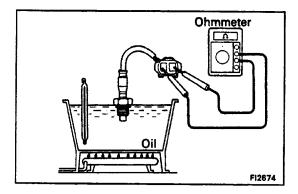

EGR GAS TEMP. SENSOR INSPECTIÖN

MEASURE RESISTANCE OF EGR GAS TEMP. SENSOR

Using an ohmmeter, measure the resistance between both terminals.

Resistance:

69–89 kΩ at 50°C (122°F)

11–15 kΩ at 100° C (212°F)

2 –4 k Ω at 150°C (302°F)

If the resistance is not as specified, replace the sensor.