



# RADIATOR REMOVAL

1. DRAIN COOLANT
2. REMOVE ENGINE UNDER COVER
3. REMOVE AIR INTAKE CONNECTOR

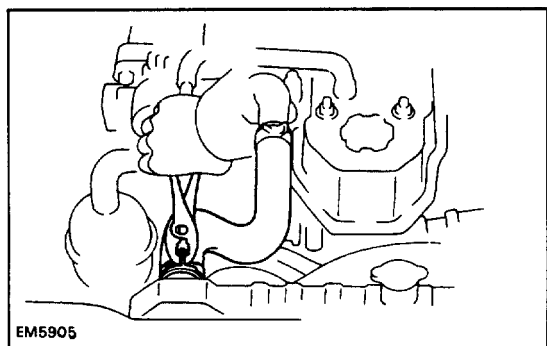

4. REMOVE RADIATOR
  - (a) Disconnect the reservoir hose.
  - (b) Remove the radiator hoses.

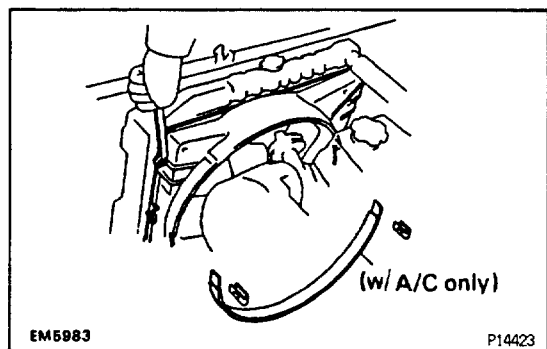

- (c) w/ A/C:
    - Remove the No. 2 fan shroud.
  - (d) Remove the No. 1 fan shroud.
  - (e) A/T:
    - Disconnect the oil cooler hoses.
- HINT:
- Be careful as some oil will leak out. Catch it in a suitable container.
  - Plug the hose to prevent oil from escaping.
- (f) Remove the 4 bolts and radiator.

## SERVICE SPECIFICATIONS

### SERVICE DATA

Thermostat	Valve opening temperature		86-90°C (187-194°F)
	Valve lift	at 100°C (212°F)	8 mm (0.31 in.) or morer
Radiator	Relief valve opening pressure	STD	74-103 kPa 0.75-1.05 kgf/cm <sup>2</sup> 10.7-14.9 psi
		Limit	59 kPa 0.6 kgf/cm <sup>2</sup> 8.5 psi

### TORQUE SPECIFICATIONS

Part tightened	N·m	kgf·cm	ft·lbf
Water outlet X Intake manifold	13	130	9