


CHARGING

*1 : 22R-E A/T
 *2 : 3VZ-E, 22R-E M/T
 *3 : CANADA

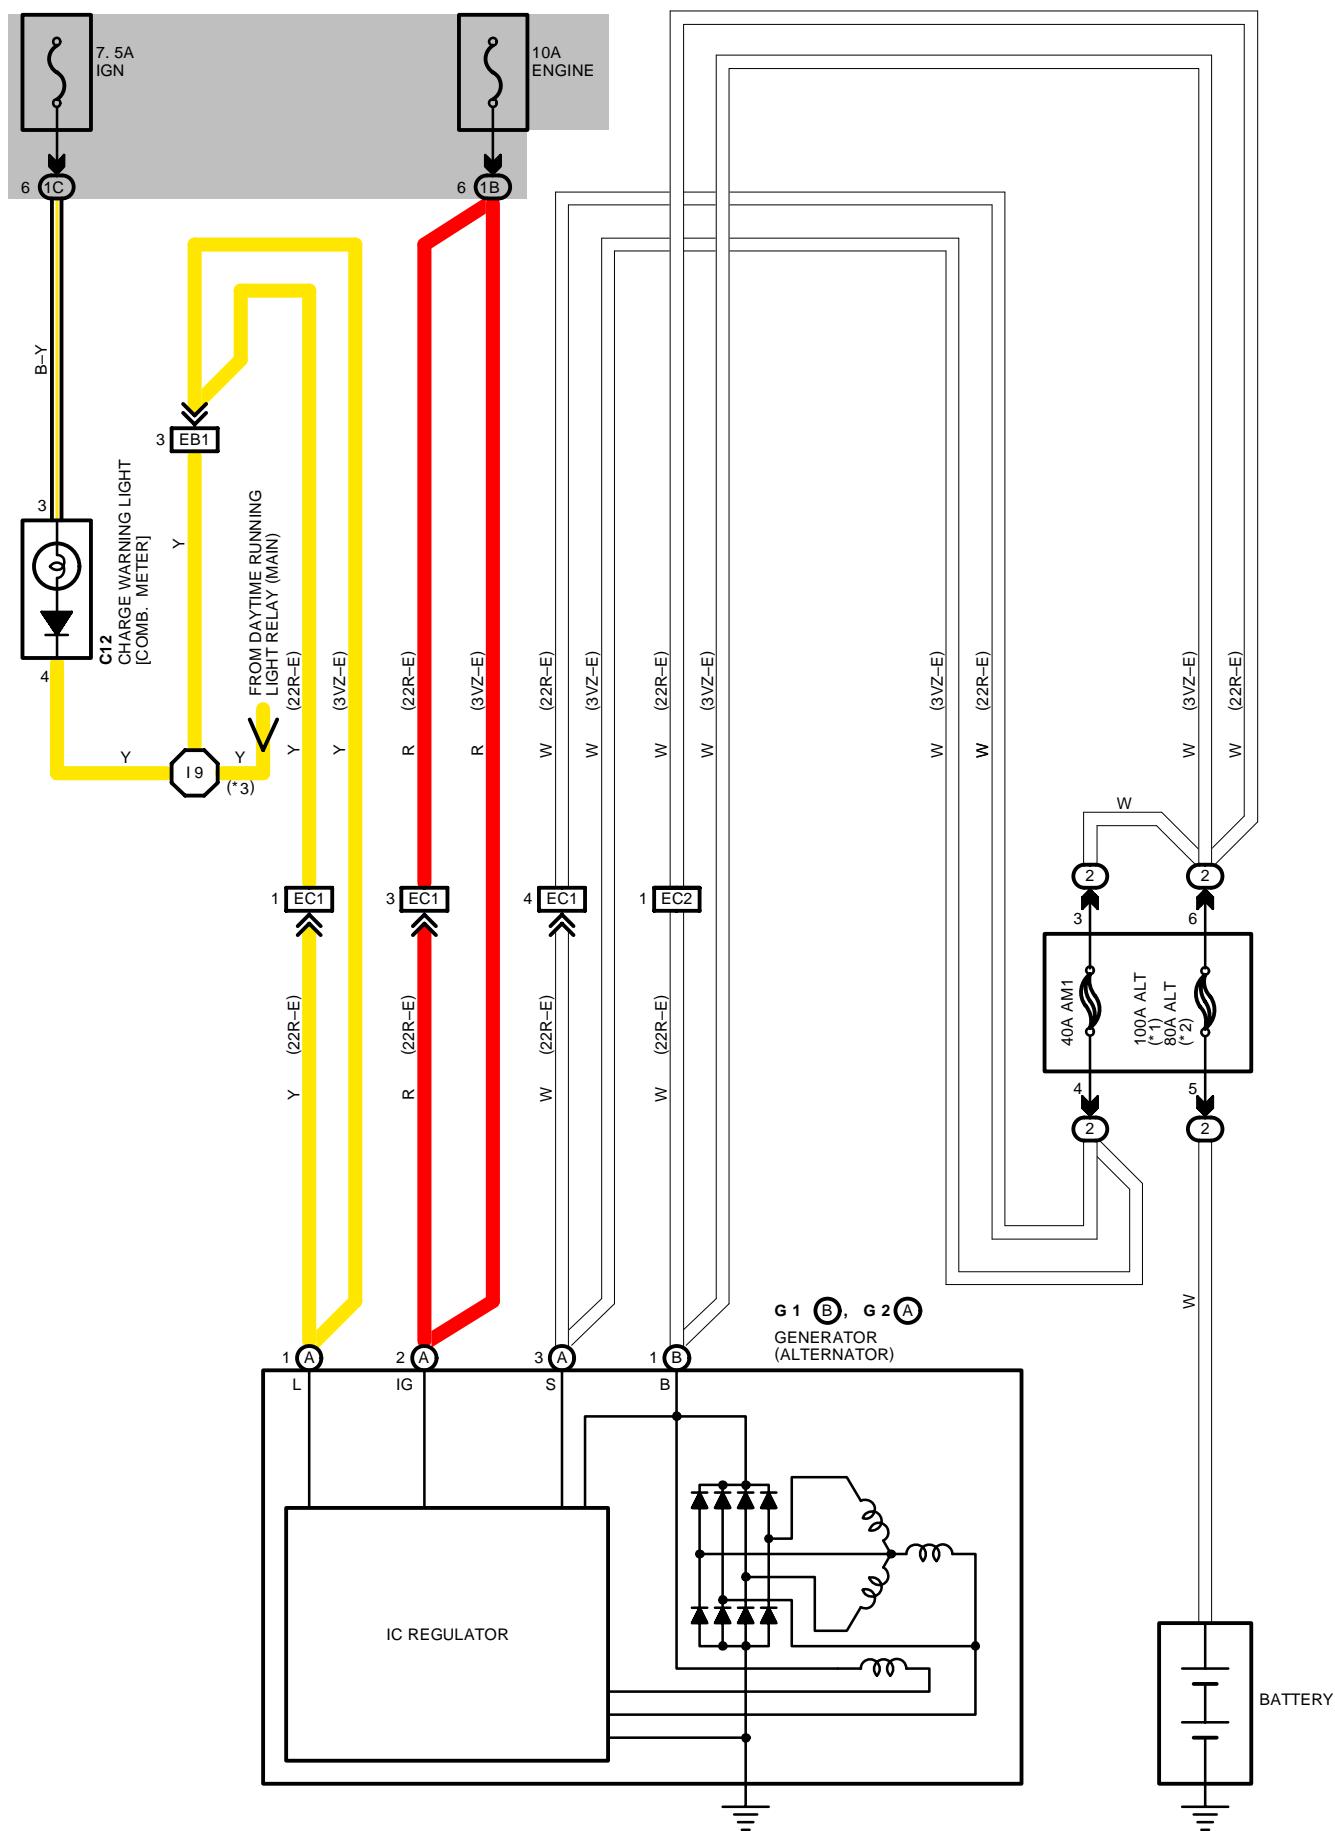

SERVICE HINTS

G1(B), G2 (A) GENERATOR (ALTERNATOR)

- (A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION
 (B) 1-GROUND : 13.9–15.1 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)
 13.5–14.3 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 115°C (239°F)

C12 CHARGE WARNING LIGHT [COMB. METER]

- 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C12	28	G 1 B	26 (22R-E)	G 2 A	26 (22R-E)
G 1 B	24 (3VZ-E)	G 2 A	24 (3VZ-E)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1C	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	30 (3VZ-E) 32 (22R-E)	COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2)
EC1 EC2	32 (22R-E)	ENGINE ROOM MAIN WIRE AND ALTERNATOR WIRE (FRONT OF LEFT FENDER)

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 9	34	COWL WIRE			

